10. APPLICATION DATA

10.1 Installation of indoor unit

(1) Ceiling cassette-4way type (FDT)

PJF012D016C D

This manual is for the installation of an indoor unit.
For electrical wiring work (Indoor), refer to page 52. For remote control installation, refer to page 56. For wireless kit installation, refer to page 164. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 70.
This unit always be used with the panel.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, ⚠WARNING and ⚠CAUTION .
  ⚠WARNING : Wrong installation would cause serious consequences such as injuries or death.
  ⚠CAUTION : Wrong installation might cause serious consequences depending on circumstances.
  Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
  ⃠ Never do it under any circumstances. | ❗ Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
  Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠WARNING

- **Installation should be performed by the specialist.**
  If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.**
  Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **Check the density refered by the foumula (accordance with ISO5149).**
  If the density exceeds the limit density, please consult the dealer and installate the ventilation system.
- **Use the genuine accessories and the specified parts for installation.**
  If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.**
  If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.**
  Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
  Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air conditioner.**
  If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
  Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
  Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property.**
  Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.**
  If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.**
  Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.**
  If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
  Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
  If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
  If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
  If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.**
  Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air conditioner.**
  Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.**
  If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.**
  Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.**
  It could cause electric shock, unit failure and improper running.

⚠ CAUTION

- **Perform earth wiring surely.**
  Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- **Earth leakage breaker must be installed.**
  If the earth leakage breaker is not installed, it can cause electric shocks.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
  Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
  Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
  If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
  It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
  Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.**
  Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
  It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
  Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.**
  It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.**
  - Places where flammable gas could leak.
  - Places where carbon fiber, metal powder or any powder is floated.
  - Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres.
  - Places exposed to oil mist or steam directly.
  - On vehicles and ships
  - Places where machinery which generates high harmonics is used.
  - Places where cosmetics or special sprays are frequently used.
  - Highly salted area such as beach.
  - Heavy snow area
  - Places where the system is affected by smoke from a chimney.
  - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
  - Locations with any obstacles which can prevent inlet and outlet air of the unit
  - Locations where vibration can be amplified due to insufficient strength of structure.
  - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
  - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
  - Locations where drainage cannot run off safely.

  It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air conditioner.**
  Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
  It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
  If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.**
  Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.**
  Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
  If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
  Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
  Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
  Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.**
  Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.**
  Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.**
  It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.**
  It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.**
  The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air conditioner with water.**
  It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.**
  Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.**
  It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

①Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
  - ○Unit type/Power supply specification ○Pipes/Wires/Small parts ○Accessory items

Accessory item

For unit hanging		For refrigerant pipe			For drain pipe			
Flat washer (M10)	Level gauge	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
								
8	1	1	1	4	1	1	1	1
For unit hanging	For unit hanging and adjustment	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting

②Selection of installation location for the indoor unit

① Select the suitable areas to install the unit under approval of the user.

- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
  This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.
  If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
- Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
  (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)

②Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

③If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.

④When plural indoor units are installed nearby, keep them away for more than 4 to 5m.

Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow.
- Install the indoor unit at a height of more than 2.5m above the floor.

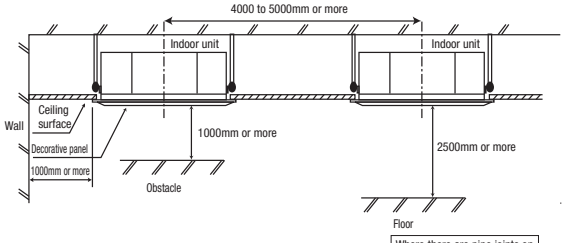

Where there are pipe joints on the way of embedded piping, provide adequate openings for inspection of the joints.

Set blow-out pattern

- Select the most proper number of blow-out air supply port direction from 4 way, 3 way or 2 way according to the shape of the room and installation position. (1 way is not available.)
- If it is necessary to change the number of air supply port, prepare the covering materials.
- Instruct the user not to use low fan speed when 2way or 3way air supply is used.
- Do not use 2way air supply port under high temperature and humidity environment. (Otherwise it could cause condensation and leakage of water.)
- It is possible to set the airflow direction port by port independently. Refer to tne user's manual for details.

③Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
  - ○For grid ceiling
    When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
  - ○In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
    When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.

Ceiling opening, Suspension bolts pitch, Pipe position

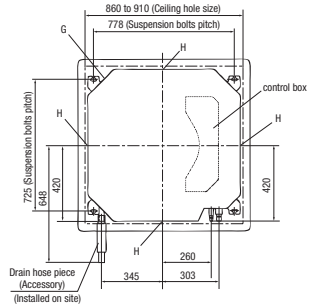

(mm)

Series	Type	a
Single Split (PAC) series	40 to 71 type	246
	100 to 140 type	298
VRF (KX) series	28 to 71 type	246
	90 to 160 type	298

Symbol	
A	Gas piping
B	Liquid piping
C	Drain piping
D	Hole for wiring
F	Suspension bolts
G	Outside air opening for ducting
H	Air outlet opening for ducting

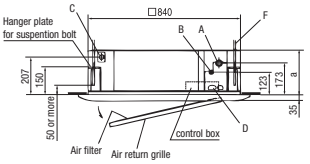

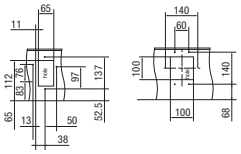

④Installation of indoor unit

Work procedure

1. Prepare a ceiling hole with the size of from 860mm × 860mm to 910mm × 910mm referring to the template attached in the package.
2. Arrange the suspension bolt at the right position (725mm×778mm).
3. Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
4. Ensure that the lower end of the suspension bolt should be 50mm above the ceiling plane. Temporarily put the four lower nuts 150mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.
5. Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer.

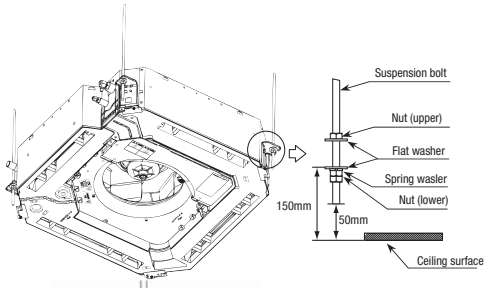

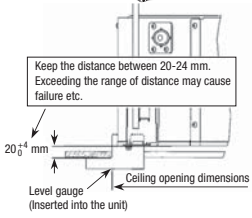

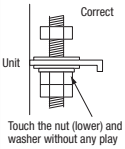

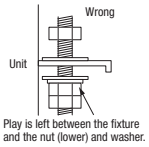

④Installation of indoor unit (continued)

6. Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of the indoor unit within 3mm.
7. Tighten four upper nuts and fix the unit after height and levelness adjustment.



Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit and it will lead to deformation of the unit, failure of attaching a panel, and generating noise from the fan.
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the installation manual for decorative panel for details.
- Make sure there is no gap between decoration panel and ceiling surface, and between decoration panel and the indoor unit. The gap may cause air leakage, dew condensation and water leakage.
- In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, put the cardboard template for installation attached on the package (packing material of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor unit.

⑤Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.
  Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.
  1) In case of reuse: Do not use old flare nut, but use the one attached to the unit or compatible with JIS B 8607, Class 2.
  2) In case of reuse: Flare the end of pipe replaced partially for R410A.

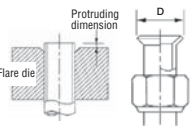

Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flare, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		Rigid (Clutch type)			
		For R410A	Conventional tool		
6.35	0.8	0 ~ 0.5	0.7 ~ 1.3	8.9 ~ 9.1	14 ~ 18
9.52	0.8			12.8 ~ 13.2	32 ~ 42
12.7	0.8			16.2 ~ 16.6	49 ~ 61
15.88	1			19.3 ~ 19.7	68 ~ 72
19.05	1.2			23.6 ~ 24.0	100 ~ 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
  In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A.
  Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.

Work procedure

1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
   ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
   (Gas may come out at this time, but it is not abnormal.)
   - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
   ※Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
   ※Do a flare connection as follows:
   - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
   - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
   - Make sure to insulate both gas pipes and liquid pipes completely.
     ※Incomplete insulation may cause dew condensation or water dropping.
4. Refrigerant is charged in the outdoor unit.
   As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

⑤Refrigerant pipe (continued)

Caution:
Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion. Refrigerating machine oil may be applied to the internal surface of flare only.

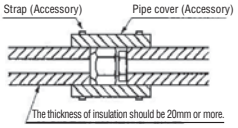

⑥Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure

1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
   Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
   - Do not apply adhesives on this end.

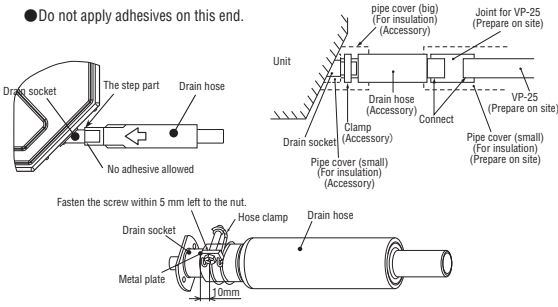

2. Prepare a joint for connecting VP-25 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-25 pipe (prepare on site).
   ※As for drain pipe, apply VP-25 made of rigid PVC which is on the market.
   - Make sure that the adhesive will not get into the supplied drain hose.
     It may cause the flexible part broken after the adhesive is dried up and gets rigid.
   - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.



3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
   - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
   - Do nt set up air vent.



   - When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

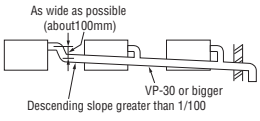

4. Insulate the drain pipe.
   - Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
     ※After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

⑥Drain pipe (continued)

Drain up

● The position for drain pipe outlet can be raised up to 700mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

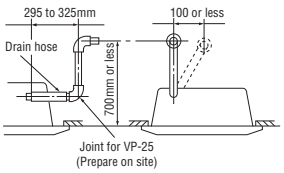

Drain test

● After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Check if the motor sound of drain pump is normal or not.
● Do drain test even if installation of heating season.
● For new building cases, make sure to complete the test before hanging the ceiling.

1. Fill water of approx. 1,000 cc in the drain pan of the main unit. Take care not to wet electrical equipment such as the drain pump, etc.
   Inject water through the blow outlet using a feed water pump, or the like, or through the refrigerant pipe joint.

●When injecting water through the blow outlet

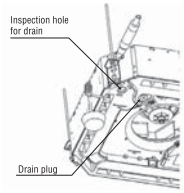

●When removing the lid to inject water through the refrigerant joint
(1) Remove screws at 2 places.
(2) While pressing the lid in the direction ① , pull and remove the lid in the direction ② .
(Remove the lid by releasing the catches from the hooks in the figure.)

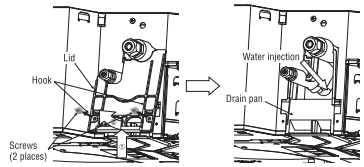

2. Make sure that water is drained out properly and there is no water leakage from any joints of the drain pipe at the test.
   Confirm that the water is properly drained out while the drain motor is operating. At the drain socket (transparent), it is possible to check if the water is drained out properly.
3. Unplug the drain plug on the indoor unit to remove remaining water on the drain pan after the test, and re-plug it. And insulate the drain pipe properly finally.

Drain pump operation

○In case electrical wiring work finished
Drain pump can be operated by remote control (wired).
For the operation method, refer to Operation for drain pump in the installation manual for wiring work.

○In case electrical wiring work not finished
Drain pump will run continuously when the dip switch"SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (230VAC on the terminal block ① and ②) is turned ON.
Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

⑦Wiring-out position and wiring connection

● Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
Be sure to use an exclusive circuit.
● Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
● Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
● Be sure to do D type earth work.
● For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

1. Remove a lid of the control box (3 screws) and the wiring cover (2 screws).
2. Hold each wiring inside the unit and fasten them to terminal block securely.
3. Fix the wiring with clamps.
4. Install the removed parts back to original place.

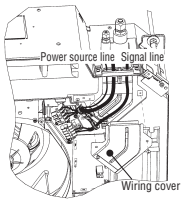

Single Split (PAC) series

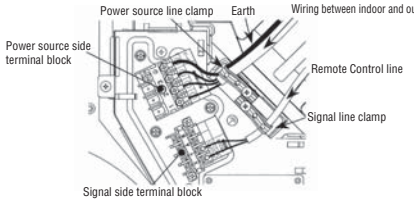

⑦Wiring-out position and wiring connection (continued)

VRF (KX) series

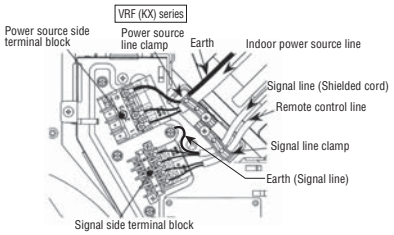

⑧Panel installation

●Attach the panel on the indoor unit after electrical wiring work.
●Refer to attached manual for panel installation for details.

⑨Check list after installation

●Check the following items after all installation work completed.

Check if;	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

⑩How to check the dirt of drain pan (Maintenance)

The method of checking the dirt of drain pan

●It is possible to check the dirt for inlet of drain pan without detaching the panel.
(Inspection is not possible when the high efficient filter and option spacer is installed.)
1. Open the air return grille and remove the panel corner cover on drain pan side.
2. Remove the cover of inspection window. (1screw)
3. Check the drain pan from the inspection window.
   If the drain pan is very dirty, remove the drain pan and clean it.
4. After checking of the dirty of drain pan, restore the cover of the inspection window securely. Improper restoration of the cover may cause dew condensation and water leakage.

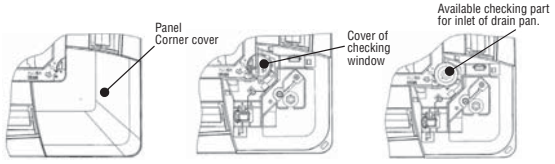

Attention for removing drain pan

●The fixing components have been attached the with drain pan. Pay attention to these components during installation and removing. Take off the hanging hook after removing four screws. During the installation of drain pan, fix the drain pan firmly by using four screws after hanging it up with the fixing hook.

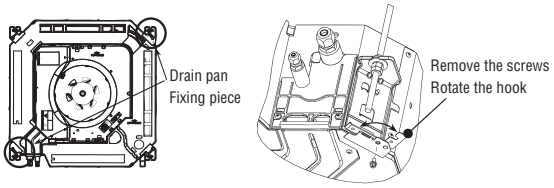

PANEL INSTALLATION MANUAL

PJF012D003C F

Read this manual together with the indoor unit's installation manual.

⚠ WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.**
- **Make sure the power supply is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.**

① Before installation

- Follow installation manual carefully, and install the panel properly.
- Check the following items.
  - ○ Accessories

Accessories

Bolt		4 pieces	For panel installation
Strap		4 pieces	For avoiding the corner panel from falling
Screw		4 pieces	For fixing the corner panel

Note: Accessories are laid in the position removing the corner panel.

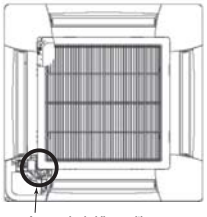

② Checking the indoor unit installation position

- Read this manual together with the air conditioner installation manual carefully.
- Check if the opening size for the indoor unit is correct with the level gauge supplied in the indoor unit.
- Check if the gap between the ceiling plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary.

Caution

If there is a height difference beyond the design limit between the installation level of the indoor unit and the ceiling plane, the panel may be subject to excessive stress during installation, it may cause distortion and damage.

- The installation level of the indoor unit can be adjusted finely from the opening provided on the corner, even after panel is attached. (Refer to ⑥ Attaching the panel for details.)

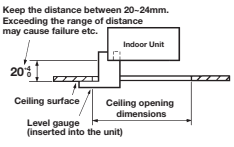

③ Removing the air return grille

1. Hold the stoppers on the air return grille (2 places) toward OPEN direction, open the air return grille.
2. Remove the hooks of the air return grille from the decorative panel while it is in the open position.

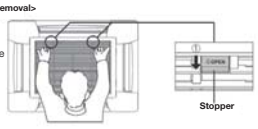

④ Removing a corner panel

- Pull the corner panel toward the direction indicated by the arrow and remove it. (Same way for all four corner panels)

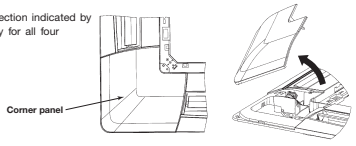

⑤ Orientation of the panel installation

Take note that there is an orientation to install the panel.

- Attach the panel with the orientation shown on the right.
- Align the "PIPE SIDE" mark (on the panel) with the refrigerant pipes on the indoor unit.
- Align the "DRAIN" mark (on the panel) with the drain pipe on the indoor unit.

CAUTION

In case the orientation of the panel is not correct, it will lead to air leakage and also it is not possible to connect the louver motor wiring.

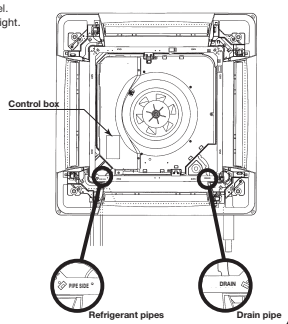

⑥ Attaching the panel

1. Temporary attaching
   - Lift up the hanger (2 places) on the panel for temporary support.
   - Hang the panel on the hook on the indoor unit.

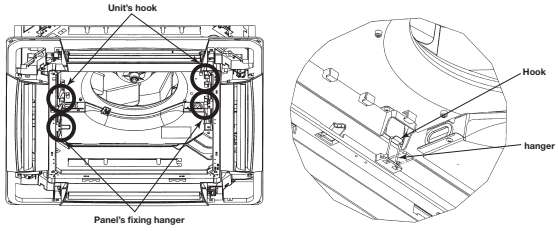

2. Fix the panel on the indoor unit
   - Fasten the panel on the indoor unit with the four bolts supplied with the panel.

Caution

- Improperly tightened hanging bolts can cause the problems listed below, so make sure that you have tightened them securely.



- If there is a gap remaining between the ceiling and the decorative panel even after the hanging bolts are tightened, adjust the installation level of the indoor unit again.



- It is possible to adjust the installation height of the indoor unit with the panel attached as long as there is no influence on the drain pipe inclination and/or the indoor unit levelness.

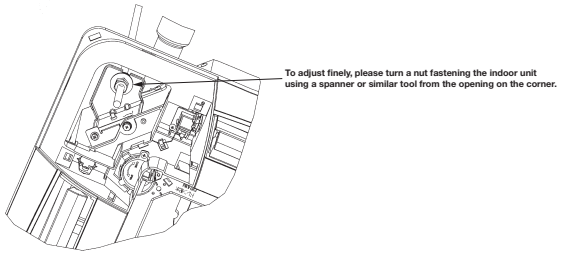

Caution

Make sure there is no stress given on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the air return grille.

⑦ Electrical wiring

1. After removing three screws of control box, detach the cover of control box (the hatched part).
2. Connect the connector for louver motor (white 20P).
   - Hold the wiring by using the clamps of the indoor unit.
   - Hold the connector inside the control box.
3. Connect the connector for panel switch.
   - Hold the wiring by using the clamps of the indoor unit.
   - Connect CNV (white) inside the control box.

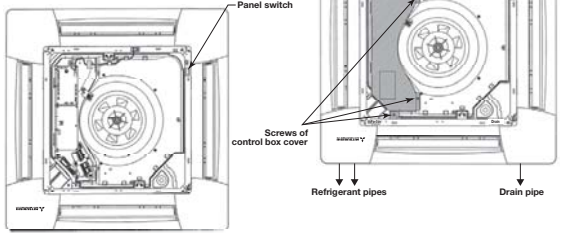

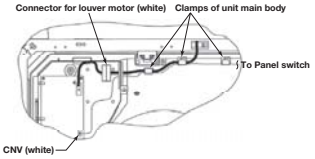

CAUTION

- If the air return grill is opened, the panel switch is turned off so that the air-conditioner cannot be operated any more.
- To start the air conditioner, close the air return grill.

⑧ Attaching a corner panel

1. To avoid unexpected falling of the corner panel, put the strap onto the corner panel's pin with turning the strap up.
2. Then hang the strap of a corner panel onto the decorative panel's pin.
3. First insert the part "a" of a corner panel into the part "A" of the decorative panel, and then engage four hooks.

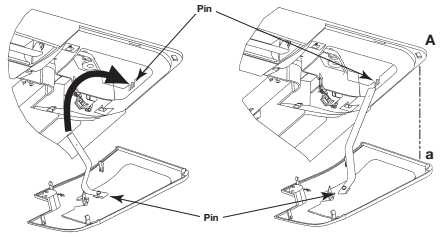

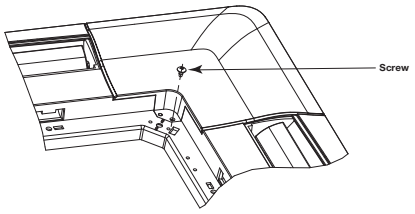

4. Fix with screw.

⑨ How to set the airflow direction

It is possible to change the movable range of the louver on the air outlet from the wired remote control. Once the top and bottom position is set, the louver will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.

For the setting method of the louver's operating range, refer to the instruction manual of the wired remote control.

If it is necessary to fix the louver position manually, follow the procedure mentioned below.

1. Shut off the main power switch.
2. Unplug the connector of the louver motor which you want to fix the position. Make sure to insulate unplugged connectors electrically with a vinyl tape.
3. Adjust the louver position slowly by hand so as to be within the applicable range mentioned below table.

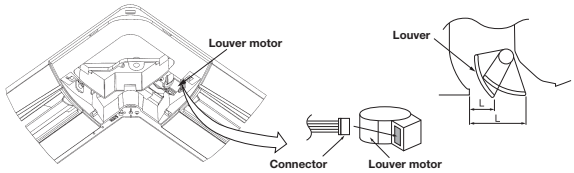

<Range of louver setting>

Vertical airflow direction	Horizontal 0°	Downwards 45°
Dimension L (mm)	43	26

※It can be set between 26~43mm freely.

Caution

- Any automatic control or operation from the remote control will be disabled on the louver whose position is fixed in the above way.
- Do not set a louver beyond the specified range. Failure to observe this instruction may result in dripping, dew condensation, the fouling of the ceiling and the malfunctioning of the unit.

⑩ Attaching the air return grille

To attach the air return grille, follow the procedure described in ⑨ Removing the air return grille in the reverse order.

1. Hang the hooks of the air return grille in the hole of the panel. (The hooks of the grille can be hanged in three side of the panel as following.)
2. After the grille is hanged, close the grille while the stoppers on the grille (2 places) are kept pressed to "OPEN" direction. When the grille comes to the original position, release the stoppers to hold the grille. Make sure to hear the sound of "CLICK" in both stoppers.

<Installation>

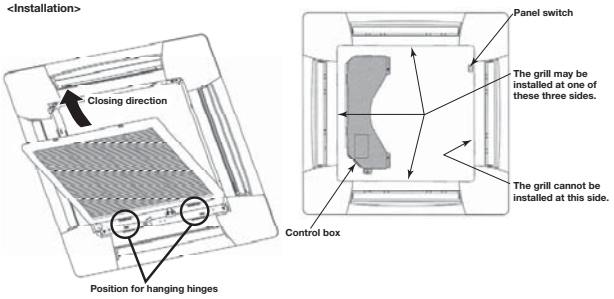

Caution

- Attaching the air return grille from the hinge side.
- Be careful in air return grille attaching, unstable attaching may cause grille falling.
- Repair or replace the distorted, broken stopper at once, or the grille falling may occur.

OUTDOOR AIR (OA) INTAKE FOR FDT

If it is required to intake OA through FDT unit, make sure to check following points carefully in order to conform to the requirement of customer.

If the OA intake volume through FDT unit is not satisfied with the required ventilation air volume, consider to install an indepemdent ventilation system.

1) Be sure to calculate cooling/heating load considering the ventilation heat load and to decide the air-conditioning system.
2) Be sure the OA intake volume to FDT unit should not exceed 20% of the Supply Air (SA) volume of FDT unit and it should be less than $2m^3$/min.
3) Be sure to decide the OA intake volume considering the mixed air temperature will be within the usage temperature range of FDT unit.
   Especially in following case, please consider to intake OA after processing OA or reducing the OA intake volume.
4) Be sure to equip a suitable filter for OA intaken in order to protect the dust.
   (Because OA does not pass through the filter equipped on FDT unit)
5) Be sure to insulate OA duct.
   (If not, it may have dew condensation.)
6) Be sure to interlock the booster fan for OA with the fan of FDT unit by using CNT connector.
   (If not, the dust trapped on the filter of FDT unit may be blown out to the room by the OA being intaken during the fan of FDT unit stopping)
7) Be sure to select a suitable booster fan for OA considering the pressure loss in the OA duct and the pressure loss at the inlet port of FDT with following diagram.
   (Please take into consideration the noise level as well)

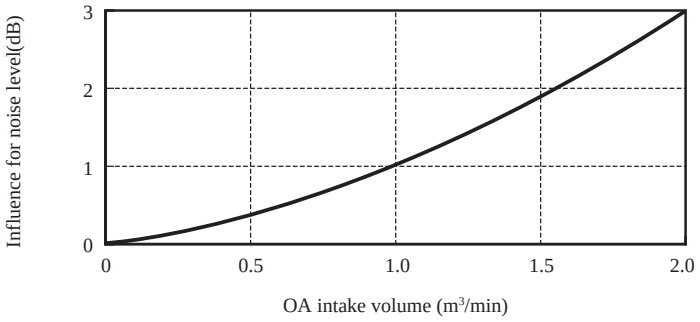

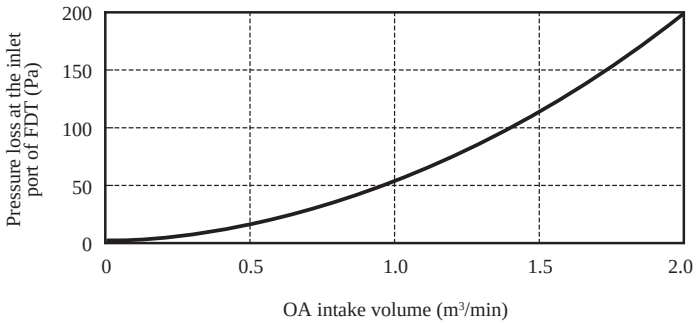

<Selection of booster fan>

Booster fan should have a static pressure calculated with following formula

Static pressure of booster fan

= the pressure loss at the inlet port of FDT (from above diagram)

+ Pressure loss in the OA duct (In case of ϕ100 duct, 5Pa/m is required)

Select the booster fan from the fan characteristic diagram

(2) Ceiling cassette-4way compact type (FDTC)

PJA012D786

This manual is for the installation of an indoor unit.
For electrical wiring work (Indoor), refer to page 52.
For remote control installation, refer to page 56. For wireless kit installation, refer to page 166.
For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 70.
This unit must always be used with the panel.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, ⚠WARNING and ⚠CAUTION .
  ⚠WARNING: Wrong installation would cause serious consequences such as injuries or death.
  ⚠CAUTION : Wrong installation might cause serious consequences depending on circumstances.
  Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown as follows:
  ⃠ Never do it under any circumstances. ❗ Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
  Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠ WARNING

- **Installation should be performed by the specialist.**
  If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.**
  Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149).**
  If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accidents.
- **Use the genuine accessories and the specified parts for installation.**
  If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.**
  If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.**
  Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
  Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air conditioner.**
  If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
  Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
  Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property.**
  Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.**
  If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.**
  Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.**
  If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
  Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
  If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
  If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
  If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.**
  Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air conditioner.**
  Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.**
  If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.**
  Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.**
  It could cause electric shock, unit failure and improper running.

⚠ CAUTION

- **Perform earth wiring surely.**
  Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- **Earth leakage breaker must be installed.**
  If the earth leakage breaker is not installed, it can cause electric shocks.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
  Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
  Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
  If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
  It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
  Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.**
  Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
  It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
  Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.**
  It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.**
  - Places where flammable gas could leak.
  - Places where carbon fiber, metal powder or any powder is floated.
  - Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres.
  - Places exposed to oil mist or steam directly.
  - On vehicles and ships
  - Places where machinery which generates high harmonics is used.
  - Places where cosmetics or special sprays are frequently used.
  - Highly salted area such as beach.
  - Heavy snow area
  - Places where the system is affected by smoke from a chimney.
  - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
  - Locations with any obstacles which can prevent inlet and outlet air of the unit
  - Locations where vibration can be amplified due to insufficient strength of structure.
  - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
  - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
  - Locations where drainage cannot run off safely.

  It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air conditioner.**
  Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
  It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
  If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.**
  Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.**
  Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
  If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
  Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
  Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
  Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.**
  Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.**
  Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.**
  It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.**
  It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.**
  The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air conditioner with water.**
  It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.**
  Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.**
  It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
  ○ Unit type/Power supply specification ○ Pipes/Wires/Small parts ○ Accessory items

Accessory itme

For unit hanging		For refrigerant pipe			For draom pipe			
Flat washer (M10)	Level gauge (Insulation)	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
								
8	4	1	1	4	1	1	1	1
For unit hanging	For adjustment in hoisting in the unit's main body	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting

② Selection of installation location for the indoor unit

① Select the suitable areas to install the unit under approval of the user.
- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
  This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.
  If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
- Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
  (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)

② Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

③ If there are 2 units of wireless type, keep them away for more than 5m to avoid malfunction due to cross communication.

④ When plural indoor units are installed nearby, keep them away for more than 4m.

Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow.
- Install the indoor unit at a height of more than 2.5m above the floor.

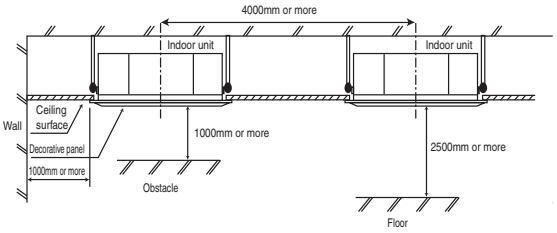

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
  ○ For grid ceiling
  When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
  ○ In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
  When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.

Ceiling opening, Suspension bolts pitch, Pipe position

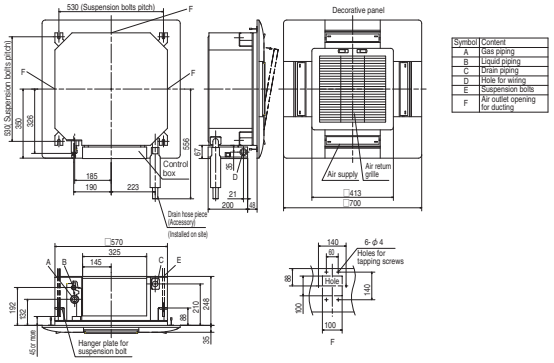

Symbol	Content
A	Gas piping
B	Liquid piping
C	Drain piping
D	Hole for wiring
E	Suspension bolts
F	Air outlet opening for ducting

④ Installation of indoor unit

Work procedure

1. This units is designed for 2 x 2 grid ceiling.
   If necessary, please detach the T bar temporarily before you install it.
   If it is installed on a ceiling other than 2 x 2 grid ceiling, provide an inspection port on the control box side.
2. Arrange the suspension bolt at the right position (530mm×530mm).
3. Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
4. Ensure that the lower end of the suspension bolt should be 45mm above the ceiling plane.
   Temporarily put the four lower nuts 88mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.



5. Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer.

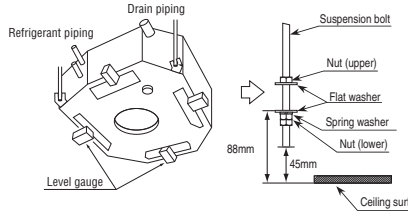

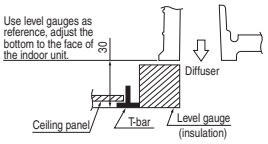

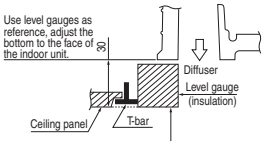

When the ceiling panel comes below the T bar, align the bottom of the level gauge to the lower face of the ceiling panel.

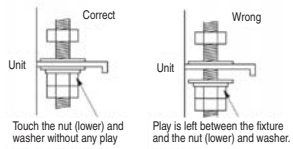

④ Installation of indoor unit (continued)

6. Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of the indoor unit within 3mm.
7. Tighten four upper nuts and fix the unit after height and levelness adjustment.



Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit and it will lead to deformation of the unit, failure of attaching a panel, and generating noise from the fan.
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the installation manual for decorative panel for details.
- Make sure there is no gap between decoration panel and ceiling surface, and between decoration panel and the indoor unit. The gap may cause air leakage, dew condensation and water leakage.
- In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, put the cardboard template for installation attached on the package (packing material of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor unit.

⑤ Refrigerant pipe

Caution

- Use the new refrigerant pipe.
  When re-using the existing pipe system for R22 or R407C, pay attention to the following items.
  ・ Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
  ・ Do not use thin-walled pipes.
- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
  In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A.
  Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.

Work procedure

1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
   ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
   (Gas may come out at this time, but it is not abnormal.)
   - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
   ※ Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes.
   ※ Do a flare connection as follows:
   - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
   - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
   - Make sure to insulate both gas pipes and liquid pipes completely.
     ※ Incomplete insulation may cause dew condensation or water dropping.
4. Refrigerant is charged in the outdoor unit.
   As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Pipe diameter	Tightening torque N·m
? 6.35	14 to 18
? 9.52	34 to 42
? 12.7	49 to 61
? 15.88	68 to 82
? 19.05	100 to 120



⑥ Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly.
  Imperfection in draining may cause flood indoors and wetting the household goods etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

⑥ Drain pipe (continued)

Work procedure

1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
   Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
   - Do not apply adhesives on this end.

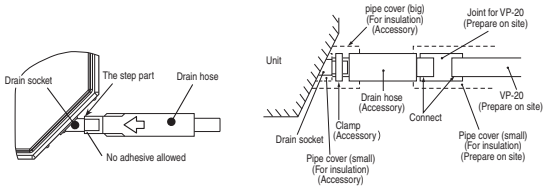

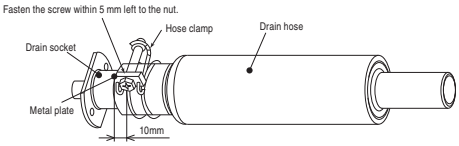

2. Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site).
   ※ As for drain pipe, apply VP-20 made of rigid PVC which is on the market.
   - Make sure that the adhesive will not get into the supplied drain hose.
     It may cause the flexible part broken after the adhesive is dried up and gets rigid.
   - Do not bend or make an excess offset on the drain hose as shown in the picture.
     Bend or excess offset will cause drain leakage.



3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
   - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
   - Do not set up air vent.



   - When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.



4. Insulate the drain pipe.
   - Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
     ※ After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up

- The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

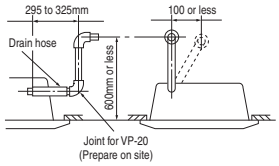

⑥ Drain pipe (continued)

Drain test

- After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Check if the motor sound of drain pump is normal or not.
- Do drain test even if installation of heating season.
- For new building cases, make sure to complete the test before hanging the ceiling.

1. Pour water of about 1000cc into the drain pan in the indoor unit by pump so as not to get the electrical component wet.
2. Make sure that water is drained out properly and there is no water leakage from any joints of the drain pipe at the test.
   Confirm that the water is properly drained out while the drain motor is operating. At the drain socket (transparent), it is possible to check if the water is drained out properly.
3. Unplug the drain plug on the indoor unit to remove remaining water on the drain pan after the test, and re-plug it. And insulate the drain pipe properly finally.

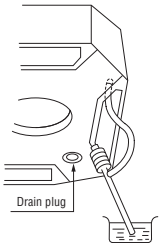

Drain pump operation

○ In case electrical wiring work finished
Drain pump can be operated by remote control (wired).
For the operation method, refer to Operation for drain pump in the installation manual for wiring work.

○ In case electrical wiring work not finished
Drain pump will run continuously when the dip switch"SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (220-240VAC on the terminal block [① and ②] or [Ⓛ and Ⓝ]) is turned ON.
Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

⑦ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country. Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

1. Remove a lid of the control box (1 screws).
2. Hold each wiring inside the unit and fasten them to terminal block securely.
3. Fix the wiring with clamp.
4. Install a lid of the control box back to original place.

Single split (PAC) series

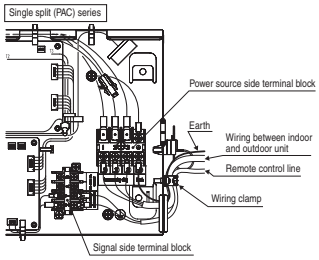

VRF (KX) series

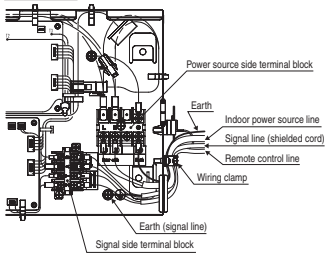

⑧ Panel installation

- After wiring work finished, install the panel on the indoor unit.
- Refer to attached panel installation manual for details. (see next page)

Accessory items

1	Hook		1 piece	For fixing temporarily
2	Chain		2 pieces	
3	Bolt		4 pieces	For installing the panel
4	Screw		1 piece	For attaching a hook
5	Screw		2 pieces	For attaching a chain

- Attach the panel on the indoor unit after electrical wiring work.
- Refer to attached manual for panel installation for details. (See next page)

⑨ Check list after installation

- Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

PANEL INSTALLATION MANUAL

PJA012D783 a

Please read this manual together with the indoor unit's installation manual.

⚠ WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.**
  Loose connection or hold will cause abnormal heat generation or fire.
- **Make sure the power supply is turned off when electric wiring work.**
  Otherwise, electric shock, malfunction and improper running may occur.

① Checking the indoor unit installation position

- Read this manual together with the air conditioner installation manual carefully.
- Check if the gap between the ceiling plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary.
- Remove the level gauge before you attach the panel.

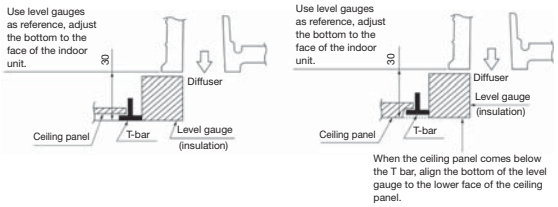

② Orientation of the panel and return air grille installation

1. Take note that there is an orientation to install the panel.
   - Attach the panel with the orientation shown on the below.
   - Align the "PIPE SIDE" mark (on the panel) with the refrigerant pipes on the indoor unit.
2. The intake grille can also be attached in a rotated position by 90 degrees.

Caution

· In case the orientation of the panel is not correct, it will lead to air leakage and also it is not possible to connect the louver motor wiring.

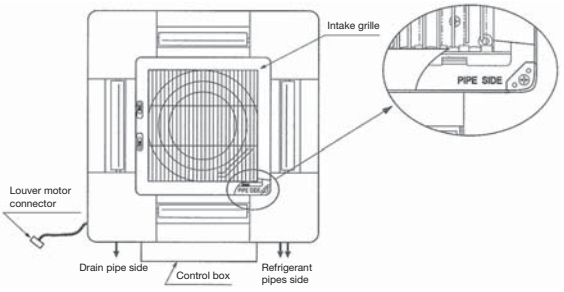

③ Removing a corner panel

- Unscrew the screw from the corner area, pull the corner panel toward the direction indicated by the arrow mark.

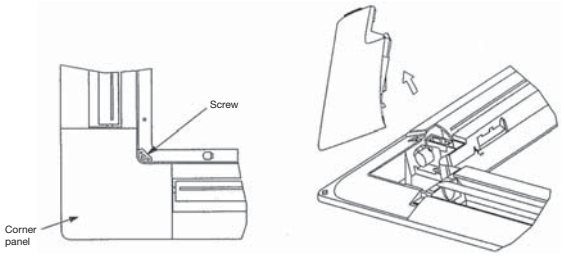

④ Attaching a corner panel

- First insert the part "a" of a corner panel into the part "A" of the cover panel, engage two hooks and tighten the screw.

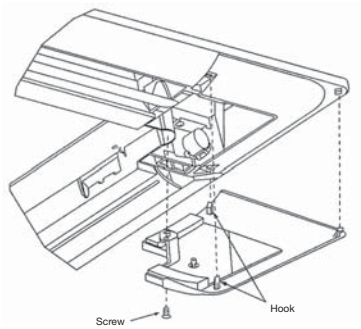

⑤ Panel installation

- Install the panel on the unit after completing the electrical wiring.

Accessories

1	Hook		1 piece	For fixing temporarily
2	Chain		2 pieces	
3	Screw		4 pieces	For hoisting the panel
4	Screw		1 piece	For attaching a hook
5	Screw		2 pieces	For attaching a chain

1. Screw in two bolts out of the four supplied with the panel by about slightly less than 5mm. (● mark ⒶⒷ) [Figure 1]

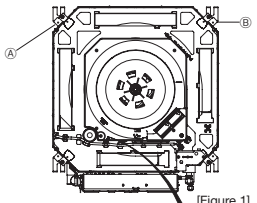

[Figure 1]

2. Attach the hook supplied with the panel to the main body with the hook fixing screw (1 screw). [Figure 2]
3. Open the intake grille.
4. Please remove the screw of a corner panel and remove a corner panel. (four places)

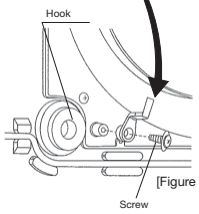

[Figure 2]

5. A panel is hooked on two bolts (● mark ⒶⒷ). [Figure 3]

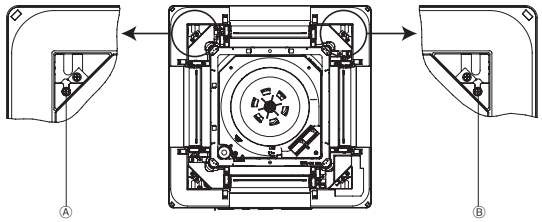

[Figure 3]

6. Please rotate a hook, put in the slot on the panel, and carry out fixing the panel temporarily. [Figure 4]

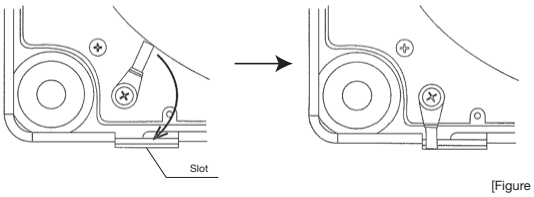

[Figure 4]

7. Tighten the two bolts used for fixing the panel temporarily and the other two.

Caution

- Improperly tightened hanging bolts can cause the problems listed below, so make sure that you have tightened them securely.



- If there is a gap remaining between the ceiling and the decorative panel even after the hanging bolts are tightened, adjust the installation level of the indoor unit again.



8. Please open the lid of a control box.
9. Like drain pump wiring, please band together by the clamp and put in louver motor wiring into a control box. [Figure 5]
10. Please connect a louver motor connector. [Figure 5]

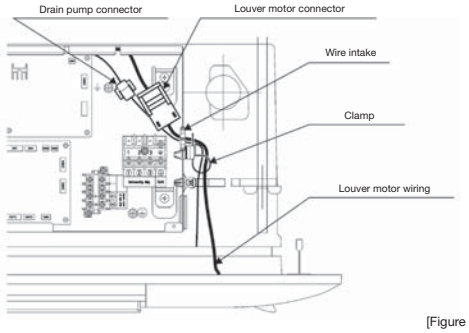

[Figure 5]

11. Attach two chains to the intake grille with two screws. [Figure 6]

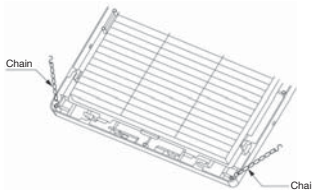

[Figure 6]

12. Replace the corner panels. Please also close a chain with a screw together then. [Figure 7]
13. Close the intake grill.

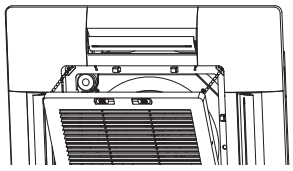

[Figure 7]

Caution

Make sure there is no stress given on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the air return grille.

⑦ How to set the airflow direction

It is possible to change the movable range of the louver on the air outlet from the wired remote control. Once the top and bottom position is set, the louver will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.
Note: This function is not able to be set with wireless remote control or simple remote control (RCH-H3).

1 Stop the air conditioner and press SET button and LOUVER button simultaneously for three seconds or more.
The following is displayed if the number of the indoor units connected to the remote control is one. Go to step **4**.

"DATA LOADING "
↓
"No.1 ▲"

The following is displayed if the number of the indoor units connected to the remote control are more than one

"SELECT I/U "
↓
"I/U000 ▲"

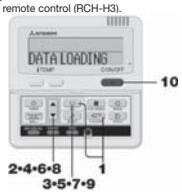

2 Press ▲ or ▼ button. (selection of indoor unit)
Select the indoor unit of which the louver is set.
[EXAMPLE]
"I/U000 ▲"⇔"I/U001 ▲"⇔"I/U002 ▲"⇔
"I/U003 ▲"

3 Press SET button. (determination of indoor unit)
Selected indoor unit is fixed.
[EXAMPLE]
"I/U001 " (displayed for two seconds)
↓
"DATA LOADING "
↓
"No.1 ▲"

4 Press ▲ or ▼ button. (selection of louver No.)
Select the louver No. to be set according to the right figure.
[EXAMPLE]
"No.1 ▲"⇔"No.2 ▲"⇔"No.3 ▲"⇔
"No.4 ▼"

5 Press SET button. (Determination of louver No.)
The louver No. to be set is confirmed and the display shows the upper limit of the movable range.
[EXAMPLE] If No.1 louver is selected,
"No.1 UPPER2 ▲" ← current upper limit position

6 Press ▲ or ▼ button. (selection of upper limit position)
Select the upper limit of louver movable range.
"position 1" is the most horizontal, and "position 6" is the most downward.
"position --" is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

"No.1 UPPER1 ▼" (the most horizontal)
⇔"No.1 UPPER2 ▲"
⇔"No.1 UPPER3 ▲"
⇔"No.1 UPPER4 ▲"
⇔"No.1 UPPER5 ▲"
⇔"No.1 UPPER6 ▲" (the most downwards)
⇔"No.1 UPPER-- ▲" (return to the default setting)



the position of the louver

7 Press SET button. (Fixing of the upper limit position)
The upper limit position is fixed and the setting position is displayed for two seconds. Then proceed to lower limit position selection display.
[EXAMPLE]
"No.1 UPPER2 (displayed for two seconds)
↓
"No.1 LOWER5 ▲" (shows current setting)

8 Press ▲ or ▼ button. (Selection of lower limit position)
Select the lower limit position of louver.
"position 1" is the most horizontal, and "position 6" is the most downwards.
"position --" is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

"No.1 LOWER1 ▼" (the most horizontal)
"No.1 LOWER2 ▲"
"No.1 LOWER3 ▲"
"No.1 LOWER4 ▲"
"No.1 LOWER5 ▲"
"No.1 LOWER6 ▲" (the most downwards)
"No.1 LOWER-- ▲" (return to the default setting)

9 Press SET button. (Fixing of the lower limit position)
Upper limit position and lower limit position are fixed, and the set positions are displayed for two seconds, then setting is completed.
- After the setting is completed, the louver which was set moves from the original position to the lower limit position, and goes back to the original position again. (This operation is not performed if the indoor unit and/or indoor unit fan is in operation.)

[EXAMPLE]
"No.1 U2 L6 (displayed for two seconds)
↓
"SET COMPLETE"
↓
"No.1 ▲"



10 Press ON/OFF button.
Louver adjusting mode ends and returns to the original display.
For setting the swing range of other louvers, return to 1 and proceed same procedure respectivoly.

NOTICE

- In case the louver No to be set is uncertain, set any louver temporarily.
The louver will swing once when the setting is completed and it is possible to confirm the louver No and the position.
After that, choose the correct louver No and set the top and bottom position.

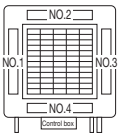

Louver No.

Caution

If the upper limit position number and the lower limit position number are set to the same position, the louver is fixed at that position auto swing does not function.

ATTENTION

If you press RESET button during settings, the display will return to previous display.
If you press ON/OFF button during settings, the mode will be ended and return to original display, and the settings that have not been completed will become invalid.

When plural remote control are connected, louver setting operation cannot be set by slave remote control.

If it is necessary to fix the louver position manually, follow the procedure mentioned below.
1. Shut off the main power switch.
2. Unplug the connector of the louver motor which you want to fix the position.
Make sure to insulate unplugged connectors electrically with a vinyl tape.
3. Adjust the louver position slowly by hand so as to be within the applicable range mentioned below table.

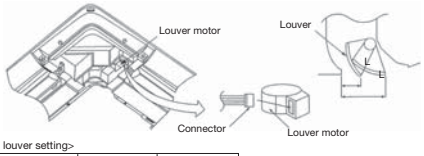

<Range of louver setting>

Vertical airflow direction	Horizontal 23°	Downwards 50°
Dimension L (mm)	40	24

※It can be set between 24~40mm freely.

Caution

- Any automatic control or operation from the remote control will be disabled on the louver whose position is fixed in the above way.
- Do not set a louver beyond the specified range. Failure to observe this instruction may result in dripping, dew condensation, the fouling of the ceiling and the malfunctioning of the unit.

(3) Duct connected-Low / Middle static pressure type (FDUM)

(a) Indoor unit

PJG012D008B

This manual is for the installation of an indoor unit.
For electrical wiring work (Indoor), refer to page 52. For remote control installation, refer to page 56. For wireless kit installation, refer to page 168. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 70.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, ⚠WARNING and ⚠CAUTION .
  ⚠WARNING : Wrong installation would cause serious consequences such as injuries or death.
  ⚠CAUTION : Wrong installation might cause serious consequences depending on circumstances.
  Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
  ⃠ Never do it under any circumstances. | ❗ Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
  Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠WARNING

- **Installation should be performed by the specialist.**
  If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.**
  Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **Check the density refered by the foumula (accordance with ISO5149).**
  If the density exceeds the limit density, please consult the dealer and installate the ventilation system.
- **Use the genuine accessories and the specified parts for installation.**
  If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.**
  If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.**
  Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
  Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air conditioner.**
  If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
  Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
  Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property.**
  Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.**
  If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.**
  Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.**
  If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
  Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
  If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
  If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
  If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.**
  Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air conditioner.**
  Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.**
  If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.**
  Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.**
  It could cause electric shock, unit failure and improper running.

⚠ CAUTION

- **Perform earth wiring surely.**
  Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock or fire due to a short circuit.
- **Earth leakage breaker must be installed.**
  If the earth leakage breaker is not installed, it could cause electric shocks or fire.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
  Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
  Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
  If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
  It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
  Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.**
  Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
  It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
  Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.**
  It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.**
  - Places where flammable gas could leak.
  - Places where carbon fiber, metal powder or any powder is floated.
  - Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres.
  - Places exposed to oil mist or steam directly.
  - On vehicles and ships
  - Places where machinery which generates high harmonics is used.
  - Places where cosmetics or special sprays are frequently used.
  - Highly salted area such as beach.
  - Heavy snow area
  - Places where the system is affected by smoke from a chimney.
  - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
  - Locations with any obstacles which can prevent inlet and outlet air of the unit
  - Locations where vibration can be amplified due to insufficient strength of structure.
  - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
  - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
  - Locations where drainage cannot run off safely.

  It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air conditioner.**
  Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
  It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
  If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.**
  Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.**
  Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
  If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
  Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
  Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
  Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.**
  Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.**
  Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.**
  It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.**
  It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.**
  The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air conditioner with water.**
  It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.**
  Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.**
  It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

○This model is middle static ducted type air conditioning unit. Therefore, do not use this model for direct blow type air conditioning unit.

①Before installation

●Install correctly according to the installation manual.

●Confirm the following points:

○Unit type/Power supply specification ○Pipes/Wires/Small parts ○Accessory items

Accessory item

For hanging	For refrigerant pipe			For drain pipe			
Flat washer (M10)	Pipe cover (big)	Pipe cover (small)	Strap	Pipe cover (big)	Pipe cover (small)	Drain hose	Hose clamp
							
8	1	1	4	1	1	1	1
For unit hanging	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting



Accessory parts are stored inside this suction side.

②Selection of installation location for the indoor unit

① Select the suitable areas to install the unit under approval of the user.

- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.

(This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above. If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.)

- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
- Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
  (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)

② Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

Space for installation and service

●Make installation altitude over 2.5m.

(Indoor Unit)

Select either of two cases to keep space for installation and services.

(Case 1) From side of unit UNIT: mm

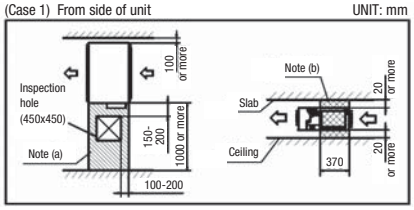

Notes (a) There must not be obstacle to draw out fan motor. (marked area)

(b) Install refrigerant pipe, drain pipe, and wiring so as not to cross marked area.

(Case 2) From bottom of unit UNIT: mm

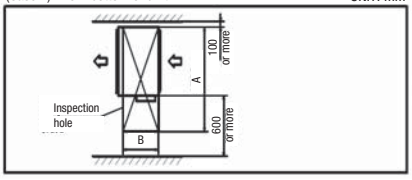

(Size of inspection hole) UNIT: mm

Single type	40-50	60-71	100-140
Multi type	22-56	71-90	112-160
A	1100	1300	1720
B	620		725

③Preparation before installation

●If suspension bolt becomes longer, do reinforcement of earthquake resistant.

○For grid ceiling

When the suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.

○In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.

When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.

●Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.

Suspension Bolt Location

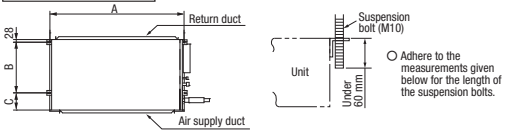

UNIT: mm

Multi type	22-56	71, 90	112-160
Single type	40-50	60, 71	100-140
A	786	986	1404
B	472	472	530
C	135	135	180

Pipe locations UNIT: mm

Multi type	22-90
Single type	40-71

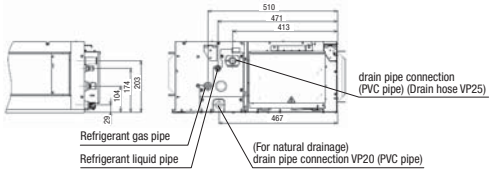

Multi type	112-160
Single type	100-140

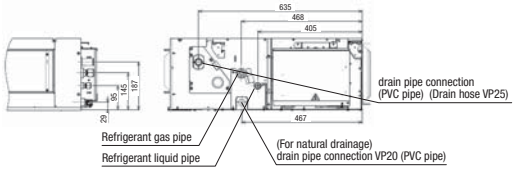

④Installation of indoor unit

Installation

[Hanging]

Hang the unit up.



If the measurements between the unit and the ceiling hole do not match upon installation, it may be adjusted with the long holed installation tool.

Adjustment for horizontality

○Either use a level vial, or adjust the level according to the method below.

●Adjust so the bottom side of the unit will be leveled with the water surface as illustrated below.



Let the pipe side be slightly sloped.

○If the unit is not leveled, it may cause malfunctions or inoperation of the float switch.

⑤Duct Work

①A corrugated board (for preventing sputtering) is attached to the main body of the air conditioner (on the outlet port). Do not remove it until connecting the duct.

●An air filter can be provided on the main body of the air conditioner (on the inlet port). Remove it when connecting the duct on the inlet port.

②Blowout duct

●Use rectangular duct to connect with unit.
Duct size for each unit is as shown below.

UNIT: mm

Single type	40-50	60-71	100-140
Multi type	22-56	71-90	112-140
A	682	882	1202
B	172	172	172



●Duct should be at their minimum length.

●We recommend to use sound and heat insulated duct to prevent it from condensation.

●Connect duct to unit before ceiling attachment.

③Inlet port

●When shipped the inlet port lies on the back.

●When connecting the duct to the inlet port, remove the air filter if it is fitted to the inlet port.

●When placing the inlet port to carry out suction from the bottom side, use the following procedure to replace the suction duct joint and the bottom plate.



●Remove the screws which fasten the bottom plate and the duct joint on the inlet port side of the unit.



●Replace the removed bottom plate and duct joint.



●Fit the duct join with a screw; fit the bottom plate.

●Make sure to insulate the duct to prevent dewing on it.

④Install the specific blowout duct in a location where the air will circulate to the entire room.

●Conduct the installation of the specific blowout hole and the connection of the duct before attaching them to the ceiling.

●Insulate the area where the duct is secured by a band for dew condensation prevention.

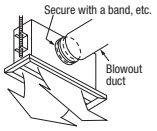

⑤Make sure provide an inspection hole on the ceiling. It is indispensable to service electric equipment, motor, functional components and cleaning of heat exchanger.

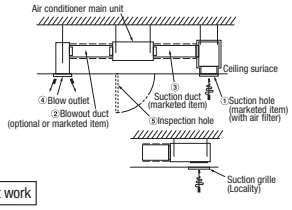

Bad example of duct work

①If a duct is not provided at the suction side but it is substituted with the space over the ceiling, humidity in the space will increase by the influence of capacity of ventilation fan, strength of wind blowing against the out door air louver, weather (rainy day) and others.

a)Moisture in air is likely to condense over the external plates of the unit and to drip on the ceiling. Unit should be operated under the conditions as listed in the above table and within the limitation of wind volume. When the building is a concrete structure, especially immediately after the construction, humidity tends to rise even if the space over the ceiling is not substituted in place of a duct. In such occasion, it is necessary to insulate the entire unit with glass wool (25mm). (Use a wire net or equivalent to hold the glass wool in place.)

b)It may run out the allowable limit of unit operation (Example: When outdoor air temperature is 35°C DB, suction air temperature is 27°C WB) and it could result in such troubles as compressor overload, etc..

c)There is a possibility that the blow air volume may exceed the allowable range of operation due to the capacity of ventilation fan or strength of wind blowing against external air louver so that drainage from be heat exchanger may fall to reach the drain pan but leak outside (Example: drip on to the ceiling) with consequential water leakage in the room.

②If vibration damping is not conducted between the unit and the duct, and between the unit and the slab, vibration will be transmitted to the duct and vibration noise may occur. Also, vibration may be transmitted from the unit to the slab. Vibration damping must be performed.



⑤Duct Work (continued)

Connecting the air intake/vent ducts

①Fresh Air Intake

[for air intake duct only]

○Use the side fresh air intake hole, or supply through a part of the suction duct.

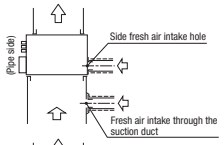

[for simultaneous air intake/vent]

○Intake air through the suction duct.
(the side cannot be used)

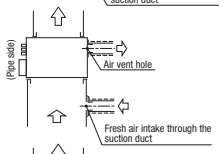

②Air Vent

○Use the side air vent hole.
(always use together with the air intake)

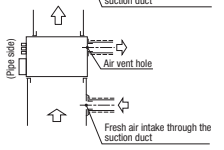

○Insulate the duct to protect it from dew condensation.

⑥Refrigerant pipe

Caution

●Use the new refrigerant pipe.
When re-using the existing pipe system for R22 or R407C, pay attention to the following items.
・Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
・Do not use thin-walled pipes.

●Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.

●Do not use any refrigerant other than R410A.
Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.

●Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.

●Use special tools for R410A refrigerant.

Piping work



When conducting piping work, make sure to allow the pipes to be aligned in a straight line for at least 250 mm, as shown in the left illustration. (This is necessary for the drain pump to function)

Work procedure

1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
● Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
※Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes.
※Do a flare connection as follows:
● Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
● When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
●Make sure to insulate both gas pipes and liquid pipes completely.
※Incomplete insulation may cause dew condensation or water dropping.
4. Refrigerant is charged in the outdoor unit.
As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Pipe diameter	Tightening torque N·m
ϕ 6.35	14 to 18
ϕ 9.52	34 to 42
ϕ 12.7	49 to 61
ϕ 15.88	68 to 82

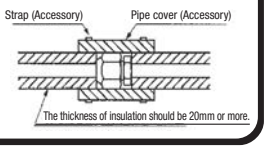

⑦Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure

1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
   Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
   - ●Do not apply adhesives on this end.
   - ●Do not use acetone-based adhesives to connect to the drain socket.

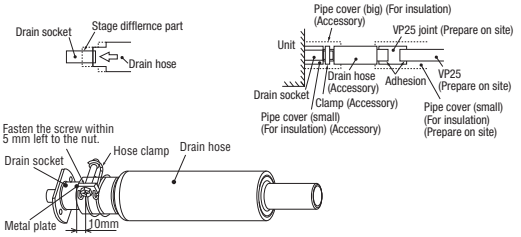

2. Prepare a joint for connecting VP-25 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-25 pipe (prepare on site).
   ※As for drain pipe, apply VP-25 made of rigid PVC which is on the market.
   - ● Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.
   - ● The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.



3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
   - ●Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
   - ●Do not set up air vent.



●When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.



4. Insulate the drain pipe.
   - ● Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
     ※After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

⑦Drain pipe (continued)

Drain up

- ● The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

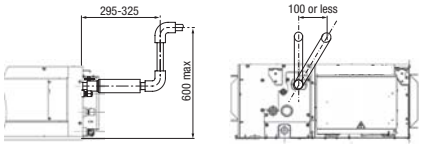

Otherwise, the construction point makes it same as drain pipe construction.

Drain test

1. Conduct a drain test after completion of the electrical work.
2. During the trail, make sure that drain flows properly through the piping and that no water leaks from connections.
3. In case of a new building, conduct the test before it is furnished with the ceiling.
4. Be sure to conduct this test even when the unit is installed in the heating season.

Procedures

1. Supply about 1000 cc of water to the unit through the air outlet by using a feed water pump.
2. Check the drain while cooling operation.

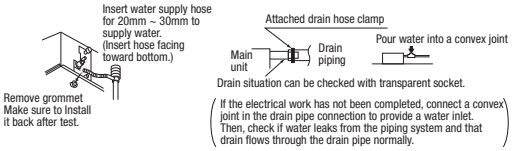

Outline of bottom drain piping work

- ● If the bottom drain piping can be done with a descending gradient (1/50-1/100), it is possible to connect the pipes as shown in the drawing below.

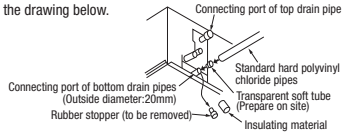

Uncoupling the drain motor connector

- ● Uncouple the connector CNR for the drain motor as illustrated in the drawing on the right.

Note: If the unit is run with the connector coupled, drain water will be discharged from the upper drain pipe joint, causing a water leak.



⑧Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
  Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

1. Remove a lid of the control box (2 screws).
2. Hold each wiring inside the unit and fasten them to terminal block securely.
3. Fix the wiring with clamps.
4. Install the removed parts back to original place.

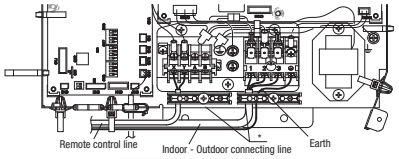

Single unit wiring connection

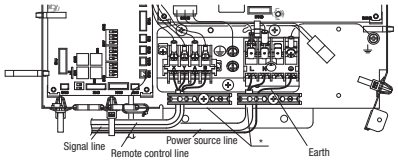

Multi unit wiring connection

* Please fix the wiring in the band not to move even if it pulls.

⑨External static pressure setting

You can set External Static Pressure (E.S.P.) by either method of MANUAL SETTING or AUTOMATIC SETTING by remote control.
Indoor unit will control fan-speed to keep rated air flow volume at each fan speed setting (Lo-Uhi)

1. MANUAL SETTING
   You can set required E.S.P. by wired remote control that calculated with the set air flow rate and pressure loss of the duct connected.
   Select No.1-10 (10Pa-100Pa) from following table according to calculation result.
   Refer to technical manual for details of air flow characteristic.

Setting No.	1	2	3	4	5	6	7	8	9	10
External Static Pressure (Pa)	10	20	30	40	50	60	70	80	90	100

※ When you set No.11-19 by remote control, unit will control fan-speed with setting of No.10 Factory default is at No.5.

- How to set E.S.P by wired remote control
  ① Push "◆" marked button(E.S.P button).
  ② Select indoor unit No. by using ⬍ button.
  ③ Select setting No. by using ⬍ button and set E.S.P. by ⊙ button.
  See detailed procedure in technical manual.



Notice
You can NOT set E.S.P. by wireless remote control.

Caution
Be sure to set E.S.P. according to actual duct connected.
Wrong settings causes excessive air flow volume or water drop blown out.

2. AUTOMATIC SETTING
   Indoor unit will recognize E.S.P. by itself automatically and select appropriate fan speed No.1-10.

- How to start automatic setting
  ①, ②Same setting as MANUAL SETTING.
  ③ Select [AUT] by using ⬍ button and press ⊙ button .
  ② After setting E.S.P. at "AUT", operate unit in FAN mode with certain fan speed (Lo-Uhi).

⑨External static pressure setting (continued)

Indoor unit fan will run automatically and recognize E.S.P. by itself.
The operation for automatic E.S.P. recognition will last about 6 minutes, and it will be stopped after recognition is completed.

Caution
- Be sure to execute AUTOMATIC SETTING by remote control AFTER ducting work is completed. When duct specification is changed after AUTOMATIC SETTING, be sure to execute AUTOMATIC SETTING again after power resetting and turning on again.
- Be sure to execute AUTOMATIC SETTING before trial cooling operation. (See ELECTRICAL WIRING WORK INSTRUCTION about trial cooling operation)
- Before AUTOMATIC SETTING, be sure to check that return air filter in duct is installed and damper is opened.
  Wrong procedure causes excessive air flow or water drop blown out.

Notice
- During operation for automatic recognition (the Auto Operation), fan rotates with certain speeds regardless of set fan speed by remote control.
- When duct is set with low static pressure (around 10-50Pa), even if indoor unit operate with higher air flow volume than rated one, but it is not abnormal.
- When you changed operation mode or stop operation with ON/OFF button during Auto Operation, the Auto operation will be canceled.
- In such case, be sure to execute AUTOMATIC SETTING again according to above procedure.

⑩Check list after installation

●Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
No mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	
Is setting of E.S.P finished?	Excessive air flow, water drop blow out	

(b) Replacement procedure of the fan unit

Notes(1) The unit is a heavy item. It must be supported securely and handled with care not to drop when it is necessary to replace.
(2) For the maintenance space, refer to page 47.

(i) Model FDUM50VF

1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) in the figure.

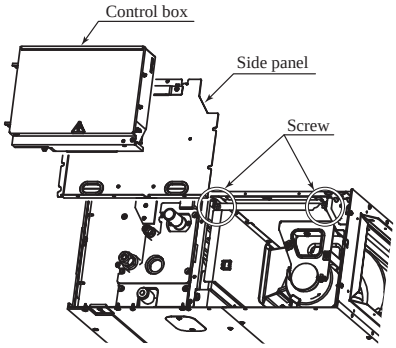

2) Take out the fan unit in the arrow direction.

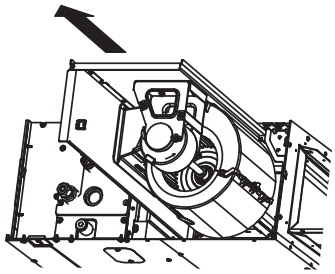

(ii) Model FDUM60VF

1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) in the figure.

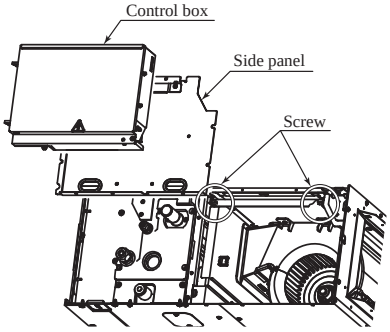

2) Take out the fan unit in the arrow direction.

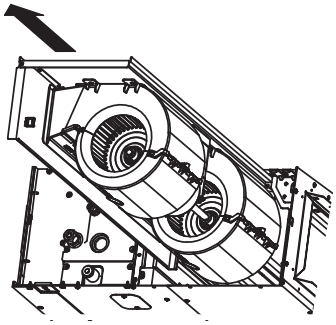

10.2 Electric wiring work installation

PSB012D999

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- **Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.**
- **The precautionary items mentioned below are distinguished into two levels, ⚠WARNING and ⚠CAUTION .**
  ⚠WARNING : Wrong installation would cause serious consequences such as injuries or death.
  ⚠CAUTION : Wrong installation might cause serious consequences depending on circumstances.
  Both mentions the important items to protect your health and safety so strictly follow them by any means.
- **The meanings of "Marks" used here are as shown on the right:**
  ⃠ Never do it under any circumstances. ❗ Always do it according to the instruction.
- **Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.**

⚠WARNING

- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
  Power source with insufficient capacity and improper work can cause electric shock and fire. ❗
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
  Loose connections or hold could result in abnormal heat generation or fire. ❗
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property.**
  Improper fitting may cause abnormal heat and fire. ❗
- **Use the genuine option parts. And installation should be performed by a specialist.**
  If you install the unit by yourself, it could cause water leakage, electric shock and fire. ❗
- **Do not repair by yourself. And consult with the dealer about repair.**
  Improper repair may cause water leakage, electric shock or fire. ⃠
- **Consult the dealer or a specialist about removal of the air conditioner.**
  Improper installation may cause water leakage, electric shock or fire. ❗
- **Turn off the power source during servicing or inspection work.**
  If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan. ❗
- **Shut off the power before electrical wiring work.**
  It could cause electric shock, unit failure and improper running. ❗

⚠CAUTION

- **Perform earth wiring surely.**
  Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit. ⏚
- **Earth leakage breaker must be installed.**
  If the earth leakage breaker is not installed, it can cause electric shocks. ❗
- **Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.)**
  Absence of breaker could cause electric shock. ❗
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
  Using the incorrect one could cause the system failure and fire. ❗
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
  Connecting the circuit by wire or copper wire could cause unit failure and fire. ⃠
- **Use power source line of correct capacity.**
  Using incorrect capacity one could cause electric leak, abnormal heat generation and fire. ❗
- **Do not mingle solid cord and stranded cord on power source and signal side terminal block.**
  In addition, do not mingle difference capacity solid or stranded cord.
  Inappropriate cord setting could cause loosing screw on terminal block, bad electrical contact, smoke and fire. ⃠
- **Do not turn off the power source immediately after stopping the operation.**
  Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown. ⃠
- **Do not control the operation with the circuit breaker.**
  It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury. ⃠

Control mode switching

- The control content of indoor units can be switched in following way. (▭ is the default setting)

Switch No.		Control Content
SW2		Indoor unit address (0-Fh)
SW5-1 SW5-2		Master/Slave Switching (plural /Slave unit Setting)
SW6-1～4		Model capacity setting
SW7－1	ON	Operation check, Drain motor test run
	OFF	Normal operation

①Electrical Wiring Connection

- Electrical wiring work must be performed by an electlician an qualified by a local power provider. These wiring specifications are determined on the assumption that the following instructions are observed:
  ① Do not use cords other than copper ones.
  Do not use any supply line lighter than one specified in parentheses for each type below.
  –braided cord (code designation 60245 IEC 51), if allowed in the relevant part 2;
  –ordinary tough rubber sheathed cord (code designation 60245 IEC 53);
  –flat twin tinsel cord (code designation 60227 IEC 41);
  –ordinary polyvinyl chloride sheathed cord (code designation 60227 IEC 53);
  ② Connect the power supply to the outdoor unit.
  ③ Pay extra attention so as not to confuse signal line and power source line connection, because an error in their connection can be burn all the boards at once.
- Screw the line to terminal block without any looseness, certainly.
- Do not turn on the switch of power source, before all of line work is done.
- Provide a dedicated branching circuit and never share a branching circuit with other equipment. If shared, disconnection at the circuit breaker may occur, which can cause secondary damage.
- Use three-core cable as wiring between indoor and outdoor unit. As for detail, refer to "INSTALLATION MANUAL" of outdoor Unit.
- Set earth of D-type.
- Do not add cord in the middle of line (of indoor power source, remote control and signal) route on outside of unit. If connecting point is flooded, it could cause problem as for electric or communication.
  (In the case that it is necessary to set connecting point on the signal line way, perform thorough waterproof measurement.)
- Run the lines (power source, remote control and "between indoor and outdoor unit") upper ceiling through iron pipe or other tube protection to avoid the damage by mouse and so on.
- Keep "remote control line" and "power source line" away from each other on constructing of unit outside.
- Do not connect the power source line [220V/240V/380V/415V] to signal side terminal block. Otherwise, it could cause failure.
- Connection of the line ("Between indoor and outdoor unit", Earth and Remote control)
  ① Remove lid of control box before connect the above lines, and connect the lines to terminal block according to number pointed on label of terminal block.
  In addition, pay enough attention to confirm the number to lines, because there is electrical polarity except earth line.
  Furthermore, connect earth line to earth position of terminal block of power source.
  ② Install earth leakage breaker on power source line. In addition, select the type of breaker for inverter circuit as earth leakage breaker.
  ③ If the function of selected earth leakage breaker is only for earth-fault protection, hand switch (switch itself and type "B" fuse) or circuit breaker is required in series with the earth leakage breaker.
  ④ Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations.
  The isolator should be set in the box with key to prevent touching by another person when servicing.

Cable connection for single unit installation

①As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power souce line to inside unit.
※As for exceptional connecting method of power souce, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
②For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

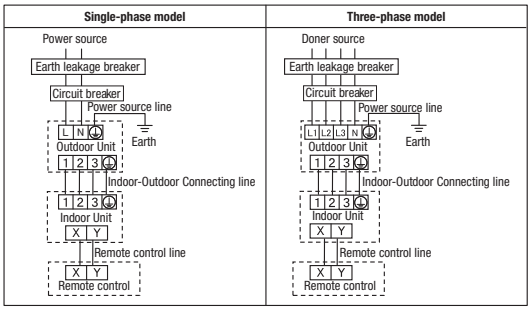

Cable connection for a V multi configuration installation

①Connect the same pairs number of terminal block "①, ②, and ③"and " ⓧ and ⓨ " between master and slave indoor units.
②Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
③Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
④When the AIR CON NO. button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the ▲ or ▼ button.

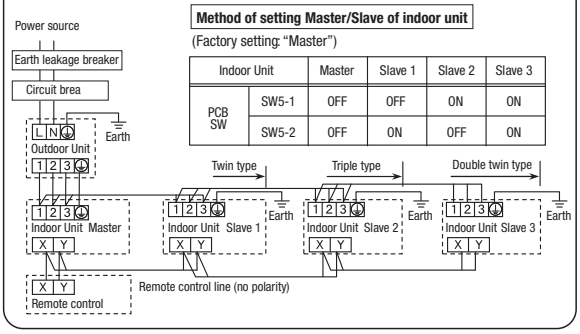

Method of setting Master/Slave of indoor unit

(Factory setting: "Master")

Indoor Unit		Master	Slave 1	Slave 2	Slave 3
PCB SW	SW5-1	OFF	OFF	ON	ON
	SW5-2	OFF	ON	OFF	ON

② Remote Control, Wiring and functions

●DO NOT install it on the following places
①Places exposed to direct sunlight
②Places near heat devices
③High humidity places
④Hot surface or cold surface enough to generate condensation
⑤Places exposed to oil mist or steam directly.
⑥Uneven surface

Installation and wiring of remote control

①Install remote control referring to the attached installation manual.
②Wiring of remote control should use 0.3mm^2 ×2 core wires or cables.
The insulation thickness is 1mm or more. (on-site configuration)
③Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm^2 . Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m ..... 0.5mm^2 × 2 cores
Under 300m ..... 0.75mm^2 × 2 cores
Under 400m ..... 1.25mm^2 × 2 cores
Under 600m ..... 2.0mm^2 × 2 cores
④Avoid using multi-core cables to prevent malfunction.
⑤Keep remote control line away from earth (frame or any metal of building).
⑥Make sure to connect remote control line to the remote control and terminal block of indoor unit. (No polarity)

Control plural indoor units by a single remote control.

①A remote control can control plural indoor units (Up to 16).
In above setting, all plural indoor units will operate under same mode and temperature setting.
②Connect all indoor units with 2 core remote control line.
③Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

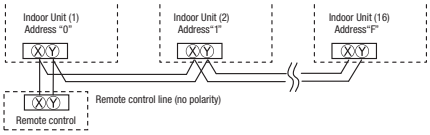

Master/ slave setting when more than one remote control unit are used

A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)
The air conditioner operation follows the last operation of the remote control regardless of the master/slave setting of it.
Acceptable combination is "two (2) wired remote controls", "one (1) wired remote control and one (1) wireless kit" or "two (2) wireless kits".
Set one to "Master" and the other to "Slave".
Note:The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

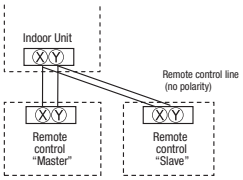

③ Operation and confirmation from remote control

Operation from RC-EX1A	Operation from RC-E5
1 Check the number of units connected in the remote control system. It checks sub units of twin, triple or W-twin connection.	
"Menu"⇒"Next"⇒"Service & Maintenance"⇒ "Input password"⇒"IU address"	Press AIR CON NO button to display the IU address. Press the ▼ or ▲ button and check addresses of connected indoor units one by one.
2 Check if each unit is connected properly in the remote control system. It cannot check main and sub units of twin, triple or W-twin connection.	
When the operation is stopped, "Menu"⇒ "Next"⇒"Service & Maintenance"⇒ "Input password"⇒"IU address"⇒"check run mode"	If AIR CON NO. button is pressed when the operation is stopped, the indoor unit address is displayed. If you select one of addresses for connected indoor units by pressing the ▼ or ▲ button and press the (MODE) button, the unit starts to blow air.
3 Setting main/slave remote controls	
"Menu"⇒"Next"⇒"R/C function settings"⇒ "Input password"⇒"Main/Sub of R/C"	Set SW1 to "Slave" for the slave remote control unit.
4 Checking operation data	
"Menu"⇒"Next"⇒"Service & Maintenance"⇒ "Input password"⇒"Operation data"	Press the CHECK button. ⇒ "UPER DATA ▼" is displayed. ⇒ Press the (SET) button. ⇒ "DATA LOADING" is displayed. ⇒ Press the "ひ SELECT I/U" button. ⇒ Select one of addresses for connected indoor units by pressing the ▲ or ▼ button. ⇒ Press the (SET) button. ⇒ "DATA LOADING" is displayed. ⇒ Select data by pressing the ▲ or ▼ button.
5 Checking inspection display	
"Menu"⇒"Next"⇒"Service & Maintenance"⇒ "Input password"⇒"Inspection display"	Press the CHECK button. ⇒ ▼ button. ⇒ ERR DATA.⇒ Press the (SET) button. ⇒ "DATA LOADING" is displayed. ⇒ Data.
6 Cooling test run from remote control	
"Menu"⇒"Next"⇒"Installation settings"⇒ "Input password"⇒"Test run"⇒ "Cooling test run"⇒"Start"	①Start the system by pressing the ON/OFF button. ②Select " (Cool)" with the (MODE) button. ③Press the TEST button for 3 seconds or longer. The screen display will switch "TEST RUN ▼ " ④When the (SET) button is pressed while " TEST RUN ▼" is indicated, a cooling test run will start. The screen display will switch "TEST RUN ".
7 Trial operation of drain pump from remote control	
"Menu"⇒"Next"⇒"Installation settings"⇒ "Input password"⇒"Test run"⇒ "Drain pump test run"⇒"Run"	①Press the TEST button for three seconds or longer. The display will change " TEST RUN ▼" ②Press the ▼ button once and cause " DRAIN PUMP ↕ " to be displayed. ③When the (SET) button is pressed, a drain pump operation will start. Display: " TO STOP "

④ Function of CNT connector of indoor printed circuit board

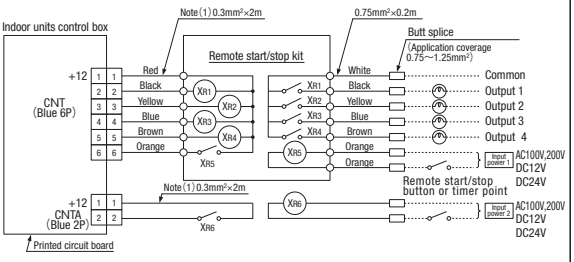

Note (1): Do not use the length over 2 meter

●CNT connector (local) vendor model
Connector : Made by molex 5264-06
Terminals : Made by molex 5263 T

●Function

Output 1	Air conditioner operation output (When the air conditioner ON: X_{R1} = ON)	
Output 2	Heating output	
Output 3	Thermostat ON output (When the thermostat ON: X_{R3} = ON)	
Output 4	Air conditioner check ON (When checking air conditioner: X_{R4} = ON)	
Input	At shipping	X_{R5} OFF ⇒ ON: Air conditioner operates.
		X_{R5} ON ⇒ OFF: Air conditioner stops.
	*Functions and controls may vary depending on the switching at site.	
Input 2 (FDT etc.)	At shipping	X_{R6} OFF ⇒ ON: Air conditioner operates.
		X_{R6} ON ⇒ OFF: Air conditioner stops.
	*Functions and controls may vary depending on the switching at site.	

* Refer to I/U settings.

●CNTA connector is installed on FDT, etc. Refer to the spec. drawings.
CNTA connector (local) vendor model
Connector : Made by JST XAP02V-1-E
Terminals : Made by JST SXA-01T-P0.6

⑥ Operation and setting from remote control

A: Refer to the instruction manual for RC-EX series.
B: Refer to the installation manual for RC-EX series.
C: Loading a utility software vie Internet
○: Nearly same function setting and operations are possible.
△: Similar function setting and operations are possible.

	Setting & display item	Description	RC-EX series	RC-E5
1. Remote Control network				
1	Control plural indoor units by a single remote control	A remote control can control plural indoor units up to 16 (in one group of remote control network). An address is set to each indoor unit.	○	○
2	Master/slave setting of remote controls	A maximum of two remote controls (include option wireless) can be connected to one indoor unit. Set one to "Master" and the other to "Slave".	B	○
2. TOP screen, Switch manipulation			A	
1	Menu	"Control", "Settings", or "Details" can be selected. (3.-19.)	A	
2	Operation mode	"Cooling", "Heating", "Fan", "Dry" or "Auto" can be set.	A	○
3	Set temp.	"Set temperature" can be set by 0.5℃ interval.	A	○
4	Air flow direction	"Air flow direction". [Individual flap control setting] can be set.	A	○
5	Fan speed	"Fan speed" can be set.	A	○
6	Timer setting	"Timer operation" can be set.	A	○
7	ON/OFF	"On/Off operation of the system" can be done.	A	○
8	High power SW	"High power operation" or "Normal operation" can be selected.	A	
9	Energy-saving SW	"Energy-saving operation" or "Normal operation" can be selected.	A	
3. Energy-saving settin			A	
1	Auto OFF timer [Administrator password]	For preventing the timer from keeping ON, set hours to stop operation automatically with this timer. ・The selectable range of setting time is from 30 to 240 minutes (10minutes interval) ・When setting is "Valid", this timer will activate whenever the ON timer is set.	A	△
2	Peak-cut timer [Administrator password]	Power consumption can be reduced by restricting the maximum capacity. Set the [Start time], the [End time] and the capacity limit % (Peak-cut %). ・4-operation patterns per day can be set at maximum. ・The setting time can be changed by 5-minutes interval. ・The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval). ・Holiday setting is available.	A	
3	Automatic temp. set back [Administrator password]	After the elapse of the set time period, the current set temp. will be set back to the [Set back temp.] ・The setting can be done in cooling and heating mode respectively. ・The selectable range of the set time is from 20 min. to 120 min. (10 min. interval). ・Set the [Set back temp.] by 1℃ interval.	A	△
4. Individual flap control setting			A	
	Individual flap control setting	The moving range (the positions of upper limit and lower limit) of the flap for individual air outlet port can be set.	A	○
5. Ventilation				
1	External ventilation (In combination with ventilator)	On/Off operation of the external ventilator can be done. ・The settings of [Interlock] with AC (air-conditioner), [Single operation] of ventilator or operation [invalid] of ventilation can be done through [Ventilation settings] in the [Remote control] menu.	A	○
6.Filter sign reset			A	○
1	Filter sign reset	The filter sign can be reset.	B	
2	Setting next cleaning date	The next cleaning date can be set.	A	
7.Initial settings				
1	Clock setting	The current date and time can be set or revised.	A	△
2	Date and time display	[Display] or [Hide] the date and/or time can be set, and the [12H] or [24H] display can be set.	A	
3	Summer time	When select [Valid], the +1hour adjustment of current time can be set.When select [Invalid], the [Summer time] adjustment can be reset.	A	
4	Contrast	The contrast of LCD can be adjusted higher or lower.	A	
5	Backlight	Switching on/off a light can be set and the period of the lighting time can be set within the range of 5sec-90sec (5sec interval).	A	
6	Controller sound	It can set with or without [Controller sound (beep sound)] at touching panel.	A	
8.Timer settings			A	
1	Set On timer by hour	The period of time to start operation after stopping can be set. ・The period of set time can be set within the range of 1hour-12hours (1hr interval). ・The operation mode, set temp and fan speed at starting operation can be set.	A	△
2	Set Off timer by hour	The period of time to stop operation after starting can be set. ・The period of set time can be set within the range of 1hour-12hours (1hr interval).	A	△
3	Set On timer by clock	The clock time to start operation can be set. ・The set clock time can be set by 5 minutes interval. ・[Once (one time only)] or [Everyday] operation can be switched. ・The operation mode, set temp and fan speed at starting operation can be set.	A	△
4	Set Off timer by clock	The clock time to stop operation can be set. ・The set clock time can be set by 5 minutes interval. ・[Once (one time only)] or [Everyday] operation can be switched.	A	△
5	Confirmation of timer settings	Status of timer settings can be seen.	A	
9.Weekly timer			A	
1	Weekly timer [Administrator password]	On timer and Off timer on weekly basis can be set. ・8-operation patterns per day can be set at a maximum. ・The setting clock time can be set by 5 minutes interval. ・Holiday setting is available. ・The operation mode, set temp and fan speed at starting operation can be set.		△ △ △
10.Home leave mode			A	
1	Home leave mode [Administrator password]	When leaving home for a long period like a vacation leave, the unit can be operated to maintain the room temperature not to be hotter in summer or not to be colder in winter. ・The judgment to switch the operation mode (Cooling⇔Heating) is done by the both factors of the set temp. and outdoor air temp. ・The set temp. and fan speed can be set.		

⑥Operation and setting from remote control (continued)

Setting & display item		Description	RC-EX series	RC-E5
11. Administrator settings		[Administrator password]	A	
1	Enable/Disable setting	•Enable/Disable setting of operation can be set. [On/Off] [Change set temp.] [Change operation mode] [Change air flow direction] [Individual flap control setting][Fan speed] [High power operation] [Energy-saving operation] [Timer settings] [Weekly timer setting] •Request for administrator password can be set. [Individual flap control setting][Weekly timer][Energy-saving setting][Home leave mode][Administrator settings]	A	△
2	Silent mode timer	The period of time to operate the outdoor unit by prioritizing the quietness can be set. •The [Start time] and the [End time] for operating outdoor unit in silent mode can be set. •The period of the operation time can be set once a day by 5 minutes interval.	A	△
3	Setting temp. range	The upper/lower limit of indoor temp. setting range can be set. •The limitation of indoor temp. setting range can be set for each operation mode in cooling and heating.	A	△
4	Temp. increment setting	The temp increment setting can be changed by 0.5℃ or 1.0℃.	A	
5	RC display setting	Register [Room name] [Name of I/U]	A	
		Display [indoor temp.] or not.		○
		Display [inspection code] or not.		△
		Display [Heating stand-by] [Defrost operation] [Auto cooling/heating] or not		○
6	Change administrator password	The administrator password can be changed. (Default setting is "0000")	A	
		The administrator password can be reset.	B	
12.Installer settings		[Service password]	B	
1	Installation date	The [Installation date] can be registered. •When registering the [Installation date], the [Next service date] is displayed automatically. (For changing the [Next service date]. please refer the item of [Service & Maintenance].)	B	
2	Service contact	The [Service contact] can be registered and can be displayed on the RC. •The [Contact company] can be registered within 10 characters. •The [Contact phone] can be registered within 13 digits.	B	
3	Test run	On/Off operation of the test run can be done.	B	
	Cooling test run	The [Cooling test run] can be done at 5℃ of set temp. for 30 minutes.		○
	Drain pump test run	Only the drain pump can be operated.		○
	Compressor Hz fixed operation	The [Test run] operation can be done with fixed compressor Hz set by installer.		○
4	Static pressure adjustment	In case of combination with only the ducted indoor unit which has a function of static pressure adjustment, the static pressure is adjustable.	B	
5	Change auto-address	The set address of each indoor unit decided by auto-address setting method can be changed to any other address. (For multiple KX units only)	B	△
6	Address setting of Main IU	Main indoor unit address can be set. •Only the Main indoor unit can change operation mode and the Sub indoor units dominated by the Main indoor unit shall follow. •The Main indoor unit can domain 10 indoor units at a maximum.	B	△
13.RC function settings		[Service password]	B	
1	Main/Sub RC setting	The setting of [Main/Sub RC] can be changed.	B	○
2	RC sensor	The offset value of [RC sensor] sensing temp. can be set respectively in heating and cooling.	B	○
3	9 RC sensor adjustment	The offset value of [RC sensor] sensing temp. can be set respectively in heating and cooling. •The setting range of offset value is ±3℃ both in cooling and heating.	B	△
4	12 Operation mode	The [Valid/Invalid] setting of [Auto][Cooling][Heating] and [Dry] can be done respectively.	B	○
5	13 Fan speed	The setting of [Fan speed] can be done from following patterns.•1-speed, 2-speeds (Hi-Me), 2-speeds (Hi-Lo), 3-speeds, 4-speeds.	B	○
6	14 External input	The applicable range ([Individual] or [All units]) of CnT input to the multiple indoor units connected in one control system. •[Individual] : Only the unit received CnT input signal.•[All units] : All the units connected to one control system received CnT input signal.	B	○
7	15 Ventilation setting	The setting of [Invalid] operation of ventilator, [Interlock] with AC or [Independent] of ventilator can be selected. •When setting [Interlock], the operation of external ventilator is interlocked with the operation of AC •When setting [Independent], only the operation of external ventilator is available.	B	○
8	16 Flap control	The [Flap control] method can be switched to[Stop at fixed position] or [Stop at any position]•[Stop at fixed position] : Stop the flap at a certain position among the designated 4 positions.•[Stop at any position] : Stop the flap at any arbitrary position just after the stopping command from RC was sent.	B	○
9	17 Auto-restart	The operation control method after recovery of power blackout happened during operation can be set.	B	○
10	18 Auto temp. setting	[Valid] or [Invalid] of [Auto temp. setting] can be selected.	B	
11	19 Auto fan speed setting	[Valid] or [Invalid] of [Auto fan speed setting] can be selected.	B	
14. I/U settings		[Service password]	B	
1	High ceiling	The fan tap of indoor fan can be changed. •[Standard] [High ceiling 1] [High ceiling 2] can be selected.	B	○
2	Filter sign	The setting of filter sign display timer can be done from following patterns.	B	○
3	External input 1	The content of control by external input can be changed.•The selectable contents of control are [On/Off] [Permission/Prohibition] [Cooling/heating] [Emergency stop]	B	○
4	External input 1 signal	The type of external input signal ([Level input]/[Pulse input]) can be changed.	B	○
5	External input 2	•The selectable contents of control are [On/Off] [Permission/Prohibition] [Cooling/heating] [Emergency stop]	B	
6	External input 2 signal	The type of external input signal ([Level input]/[Pulse input]) can be changed.	B	
7	Heating thermo-off temp. adjust.	The judgment temp. of heating thermo-off can be adjusted within the range from 0 to +3℃ (1℃ interval)	B	△
8	Return air sensor adjust.	The sensing temp. of return air temp. sensor built in the indoor unit can be adjusted within the range of ±2℃.	B	△
9	Fan control in heating thermo OFF	The fan control method at heating thermo-off can be changed.•The selectable fan control methods are [Low] [Set fan speed] [Intermittent] [Stop].	B	○
10	Anti-frost temp.	The judgment temp. of anti-frost control for the indoor unit in cooling can be changed to [Temp. High] or [Temp. Low].	B	○
11	Anti-frost control	When the anti-frost control of indoor unit in cooling is activated, the fan speed can be changed.	B	○
12	Drain pump operation	In any operation mode in addition to cooling and dry mode, the setting of drain pump operation can be done.	B	○
13	Residual fan operation in cooling	The time period of residual fan operation after stopping or thermo-off in cooling mode can be set.	B	○
14	Residual fan operation in heating	The time period of residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
15	Intermittent fan operation in heating	The fan operation rule following the residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
16	Fan circulator operation	In case that the fan is operated as the circulator, the fan control rule can be set.	B	
17	Control pressure adjust. (For OA processing unit only)	When only the OA processing units are operated, control pressure value can be changed.	B	○
18	Auto operation mode	The [Auto rule selection] for switching the operation mode automatically can be selected from 3 patterns.	B	
19	Thermo. rule setting	When selecting [Outdoor air temp. control], the judgment temp can be offset by outdoor temp..	B	
20	Auto fan speed control	Under the [Auto fan speed control] mode, the switching range of fan speed can be selected from following 2 patterns [Auto 1] [Auto 2]. •[Auto 1] : Hi ⇔Me⇔Lo•[Auto 2] : P-hi⇔Hi⇔Me⇔Lo	B	
15.Service & Maintenance		[Service password]	B	
1	IU address No.	Max. 16 indoor units can be connected to one remote control, and all address No. of the connected indoor units can be displayed. •The indoor unit conforming to the address No. can be identified by selecting the address No. and tapping [Check] to operate the indoor fan.	B	○
2	Next service date	The [Next service date] can be registered.•The [Next service date] and [Service contact] is displayed on the [Periodical check] message screen.	AB	
3	Operation data	Total 39 items of [Operation data] for indoor unit and outdoor unit can be displayed.	B	○
4	Error history	[Date and time of error occurred] [I/U address] [Error code] for Max. 16 latest cases of error history can be displayed.	B	△
	Display anomaly data	The operation data just before the latest error stop can be displayed.	B	
	Reset periodical check	The timer for the periodical check can be reset.	B	○
5	Saving I/U settings	The I/U settings memorized in the indoor PCB connected to the remote control can be saved in the memory of the remote control.	B	
6	Special settings	[Erase I/U address] [CPU reset] [Initializing] [Touch panel calibration]	B	△
16.Inspection			A	△
	Confirmation of Inspection	The address No, of anomalous indoor/outdoor unit and error code are displayed.		
17.PC connection			C	
	USB connection	Weekly timer setting and etc., can be set from PC.		

10.3 Installation of wired remote control (option)

PJZ012D077B

(1) Model RC-EX1A

eco touch REMOTE CONTROL RC-EX1A
INSTALLATION MANUAL



1 . Safety precautions

This installation manual describes the installation methods and precautions related to the remote control. Use this manual together with the user's manuals for the indoor unit, outdoor unit and other optional equipment. Please read this manual carefully before starting the installation work to install the unit properly.

Safety precautions

●Please read this manual carefully before starting installation work to install the unit properly.
Every one of the followings is important information to be observed strictly.

⚠**WARNING**	Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc..
⚠**CAUTION**	Failure to follow these instructions properly may cause injury or property damage.

It could have serious consequences depending on the circumstances.

●The following pictograms are used in the text.

	Never do.		Always follow the instructions given.

●Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, the "Installation Manual" should be given to a new owner.

⚠WARNING

Ask a professional contractor to carry out installation work according to the installation manual.
Improper installation work may result in electric shocks, fire or break-down.



Shut OFF the main power supply before starting electrical work.
Otherwise, it could result in electric shocks, break-down or malfunction.



Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.
If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.



Do not install the unit where water vapor is generated excessively or condensation occurs.
It could cause electric shocks, fire or break-down.



Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.
Improper connections or fixing could cause heat generation, fire, etc.



Seal the inlet hole for remote control cable with putty.
If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.



When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

⚠ CAUTION

Do not install the remote control at following places.

It could cause break-down or deformation of remote control.

(1) Where it is exposed to direct sunlight
(2) Near the equipment to generate heat
(3) Where the surface is not flat

Do not leave the remote control with its upper case removed.

When the upper case is removed, put it in a packing box or packing bag to protect internal PCBs or other parts from dust, moisture, etc.

2 . Accessories & prepare on site

Accessories	R/C main unit, wood screw (ø3.5 x 16) 2 pcs User's Manual, Installation Manual

Parts procured at site

Item name	Q'ty	Remark
Switch box For 1 piece or 2 pieces (JIS C8340 or equivalent)	1	These are not required when installing directly on a wall.
Thin wall steel pipe for electric appliance (JIS C8305 or equivalent)	As required	
Lock nut, bushing (JIS C8330 or equivalent)	As required	
Lacing (JIS C8425 or equivalent)	As required	Necessary to run R/C cable on the wall.
Putty	Suitably	For sealing gaps
Molly anchor	As required	
R/C cable (0.3 mm^2 x 2 pcs)	As required	See right table when longer than 100 m

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm^2 . Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

< 200 m	0.5 mm^2 x 2-core
< 300 m	0.75 mm^2 x 2-core
< 400 m	1.25 mm^2 x 2-core
< 600 m	2.0 mm^2 x 2-core

3. Remote control installation procedure

Determine where to install the remote control

Installation "Using a switch box"
"Installed directly on a wall"
Wiring direction "Backward"
"Upper center", "Upper left"

Cautions for selecting installation place

(1) Installation surface must be flat and sufficiently strong. R/C case must not be deformed.
(2) Where the R/C can detect room temperatures accurately. This is a must when detecting room temperatures with the temperature sensor of R/C.
- Install the R/C where it can detect the average temperature in the room.
- Install the R/C separated from a heat source sufficiently.
- Install the R/C where it will not be influenced by the turbulence of air when the door is opened or closed.

Select a place where the R/C is not exposed to direct sunlight or blown by winds from the air conditioner or temperatures on the wall surface will not deviate largely from actual room temperature.

Installation space

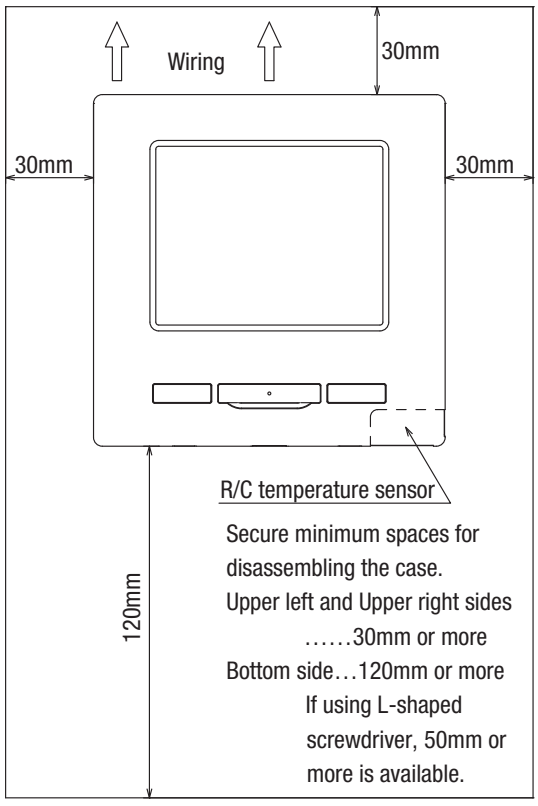

Request

Be sure not to install R/C at a place where temperatures around the installation surface of R/C may differ largely from actual room temperature.
Difference between detected temperature and actual room temperature could cause troubles.
The correction for detected temperature by the R/C cannot offset such temperature difference because it corrects the detected temperatures itself.

Request

Do not install the R/C at a place where it is exposed to direct sunlight or where surrounding air temperature exceeds 40°C or drops below 0°C.
It could cause discoloration, deformation, malfunction or breakdown.

Installation procedure

Dimensions (Viewed from front)

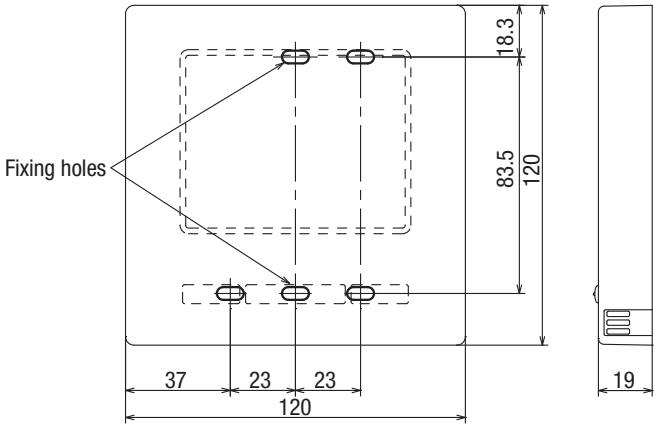

PCB side (Viewed from rear)

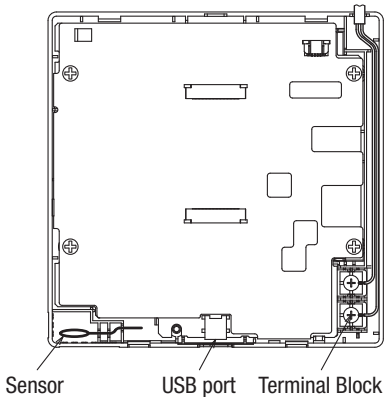

① To remove the upper case from the bottom cases of R/C
· Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove.

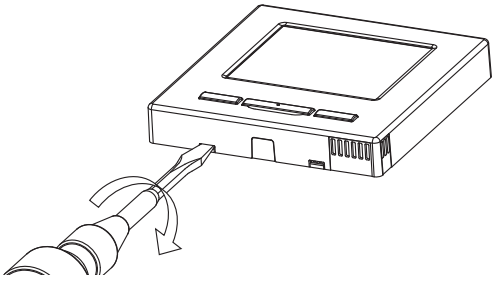

Take care to protect the removed upper case from moisture or dust.

② Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit.
R/C wires (X, Y) have no polarity.

In case of embedding wiring (When the wiring is retrieved "Backward")

③ Embed the switch box and the R/C wires beforehand.

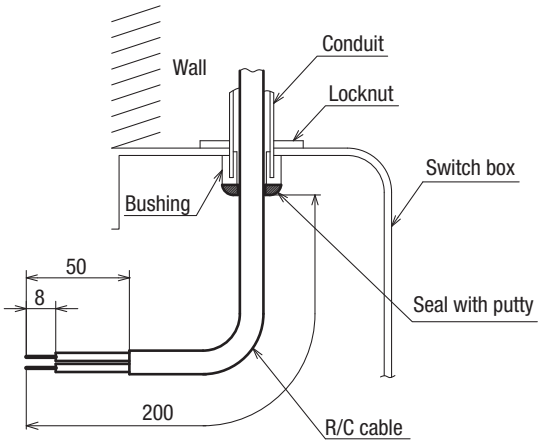

Seal the inlet hole for the R/C wiring with putty.
● If dust or insect enters, it could cause electric shocks, fire or breakdown.

④ When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

Switch box for 1 pc

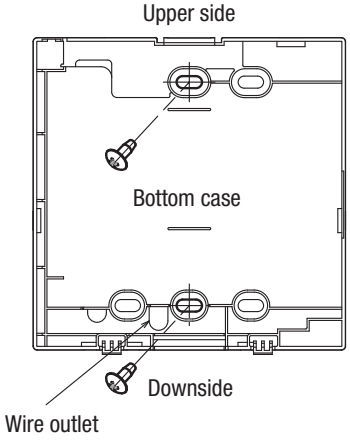

Switch box for 2 pcs

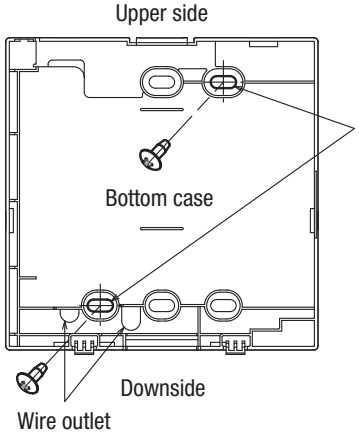

Cut out the thin wall part at the screw mounting section with a knife or the like before tightening the screw.

⑤ When fixing the bottom case diagonally at 2 places, cut out the thin wall section on the case.

⑥ Fix wires such that the wires will run around the terminal screws on the top case of R/C.

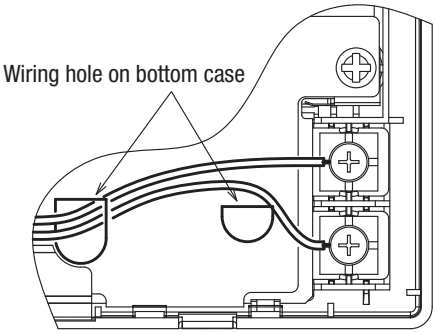

Cautions for wire connection

Use wires of no larger than 0.5 mm^2 for wiring running through the remote control case, Take care not to pinch the sheath.
Tighten by hand (0.7 N·m or less) the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.

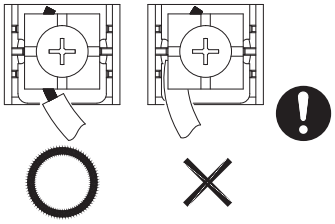

⑦ Install the upper case with care not to pinch wires of R/C.

In case of exposing wiring (When the wiring is taken out from the “upper center” or “upper left” of R/C)

③ Cut out the thin wall sections on the cases for the size of wire.

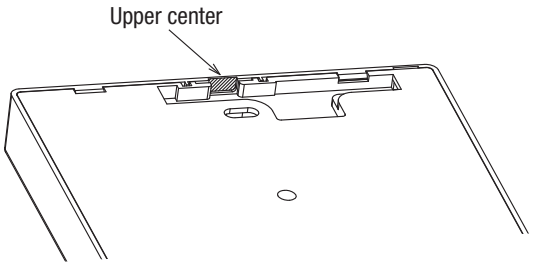

When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.

When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.

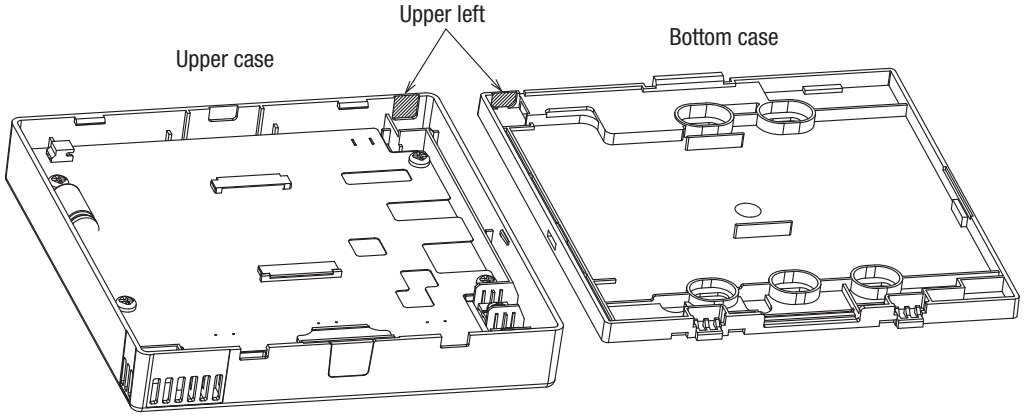

If the hole is cut too large, moisture, dust or insects may enter.
Seal gaps with putty or the like.

④ Fix the bottom R/C case on a flat surface with wood screws.
⑤ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
⑥ Fix wires such that the wires will run around the terminal screw of the top case of R/C.
⑦ Install the top case with care not to pinch wires of R/C.

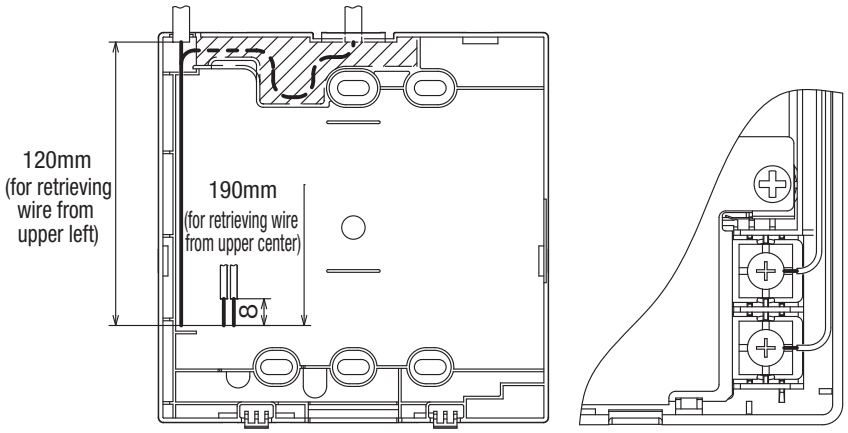

Main/Sub setting when more than one remote control are used

Main-Sub setting for use of two or more R/C

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.
One is main R/C and the other is sub R/C.
Operating range is different depending on the main or sub R/C.

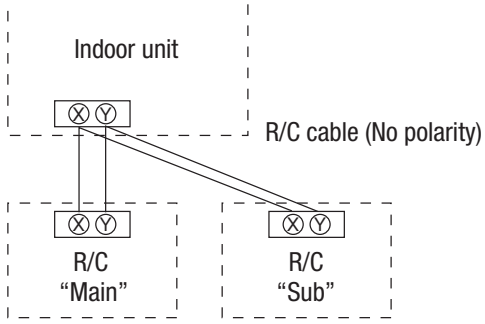

Set the "Main" and "Sub" as described at Section 7 of installtion manual attached to the remote control.

R/C function	Main	Sub
Run/Stop, setting temperature, fan speed and flap direction operations	○	○
High power and energy-saving operations	○	○
Energy-saving setting	○	—
R/C sensor	○	—
Test run menu operation	○	—
Room temperature range setting	○	—
Indoor unit settings	○	—
Individual flap control	○	—
Operation data display	○	—
Error history display	○	○

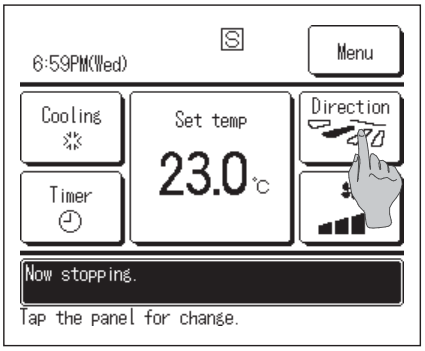

Note: Connection to personal computer

It can be set from a personal computer via the USB port (mini-B).
Connect after removing the cover for USB port of upper case.

Replace the cover after use.
If dust, insect, etc. enters, it could cause electric shocks or breakdown.

Special software is necessary for the connection.
For details, view the web site or refer to the engineering data.

Do not connect to a personal computer without using the special software.
Do not connect the personal computer to the USB simultaneously with other USB devices.
It could cause malfunction or breakdown of R/C or personal computer.

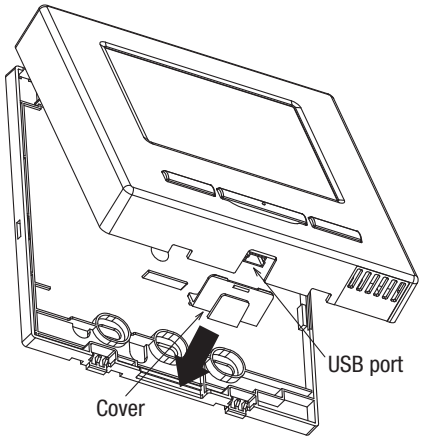

Note: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

- The administrator password at factory default is “0000”. This setting can be changed (Refer to User's Manual). When the administrator password is forgotten, it can be initialized, if the [Highpower] and the [Energy-saving] buttons are pushed simultaneously for 5 seconds on the administrator password input screen.
- Service password is “9999”, which cannot be changed.
  When the administrator password is input, the service password is also accepted.

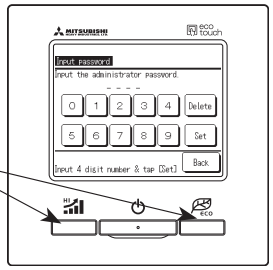

(2) Model RC-E5

PJA012D730

Read together with indoor unit's installation manual.

⚠WARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
  Loose connection or hold will cause abnormal heat generation or fire.
- Make sure the power supply is turned off when electric wiring work.
  Otherwise, electric shock, malfunction and improper running may occur.

⚠CAUTION

- DO NOT install the remote control at the following places in order to avoid malfunction.
  (1) Places exposed to direct sunlight
  (2) Places near heat devices
  (3) High humidity places
  (4) Hot surface or cold surface enough to generate condensation
  (5) Places exposed to oil mist or steam directly
  (6) Uneven surface
- DO NOT leave the remote control without the upper case.
  In case the upper cace needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.

Accessories	Remote control, wood screw (ø3.5×16) 2 pieces
Prepare on site	Remote control cord (2 cores) the insulation thickness in 1mm or more. [In case of embedding cord] Erectrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)

Installation procedure

① Open the cover of remote control, and remove the screw under the buttons without fail.

② Remove the upper case of remote control.
Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.

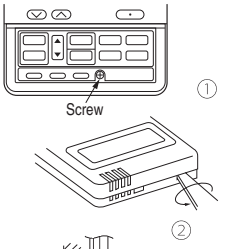

[In case of embedding cord]

③ Embed the erectrical box and remote control cord beforehand.

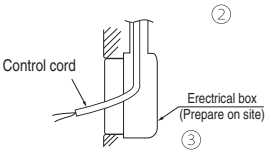

④ Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to erectrical box.
Choose either of the following two positions in fixing it with screws.

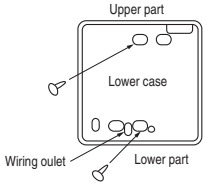

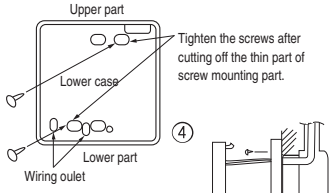

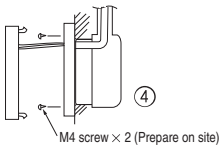

⑤ Connect the remote control cord to the terminal block.
Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)

⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

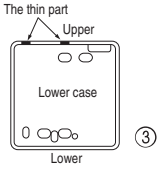

[In case of exposing cord]

③ You can pull out the remote control cord from left upper part or center upper part.
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.

④ Install the lower case to the flat wall with attached two wooden screws.

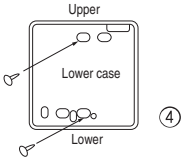

⑤ Connect the remote control cord to the terminal block.
Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y).
(X and Y are no polarity)
Wiring route is as shown in the right diagram depending on the pulling out direction.

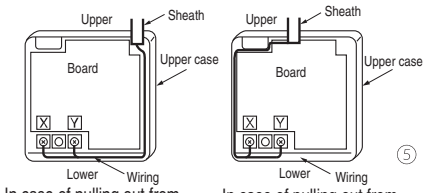

In case of pulling out from upper left

In case of pulling out from upper center

The wiring inside the remote control case should be within 0.3mm^2 (recommended) to 0.5mm^2.
The sheath should be peeled off inside the remote control case.
The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm Y wiring : 195mm	X wiring : 170mm Y wiring : 190mm



⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
⑦ In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control

① Wiring of remote control should use 0.3mm^2 × 2 core wires or cables. (on-site configuration)
② Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm^2 . Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m·····0.5mm^2 × 2 cores
Under 300m·····0.75mm^2 × 2 cores
Under 400m·····1.25mm^2 × 2 cores
Under 600m·····2.0mm^2 × 2 cores

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

Switch	Setting	Contents
SW1	M	Master remote control
	S	Slave remote control

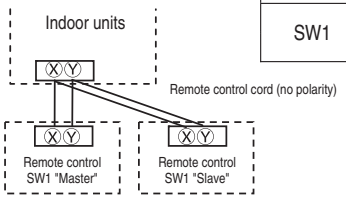



Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.
Note: The setting "Remote control thermistor enabled" is only selectable with the master remote control in the position where you want to check room temperature.
The air conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.
Master remote control : "WAIT M"
Slave remote control : "WAIT S"

At the same time, a mark or a number will be displayed for two seconds first.
This is the software's administration number of the remote control, not an error cord.



※ The left mark is only an example. Other marks may appear.

When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear.
Check wiring of the indoor unit and the outdoor unit etc.



The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating : 16~30˚C (55~86˚F)

Except heating (cooling, fan, dry, automatic) : 18~30˚C (62~86˚F)

●Upper limit and lower limit of set temperature can be changed with remote control.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30˚C (68 to 86˚F).

Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

1. When ⑫TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting),
   【If upper limit value is set】
   During heating, you cannot set the value exceeding the upper limit.

   【If lower limit value is set 】
   During operation mode except heating, you cannot set the value below the lower limit.

2. When ⑫TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE"
   【If upper limit value is set】
   During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

   【If lower limit value is set 】
   During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

●How to set upper and lower limit value

1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds.
   The indication changes to "FUNCTION SET ▼".
2. Press ▼ button once, and change to the "TEMP RANGE ▲ " indication.
3. Press (SET) button, and enter the temperature range setting mode.
4. Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using ▲ ▼ button.
5. Press (SET) button to fix.
6. When "UPPER LIMIT ▼" is selected (valid during heating)
   ① Indication: " ∨ ∧ SET UP" → "UPPER 30˚C ∨"
   ② Select the upper limit value with temperature setting button ∨ ∧. Indication example: "UPPER 26˚C ∨ ∧" (blinking)
   ③ Press (SET) button to fix. Indication example: "UPPER 26˚C" (Displayed for two seconds)
   After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
   ① Indication: " ∨ ∧ SET UP" → "LOWER 18˚C ∧"
   ② Select the lower limit value with temperature setting button ∨ ∧. Indication example: "LOWER 24˚C ∨ ∧" (blinking)
   ③ Press (SET) button to fix. Indication for example: "LOWER 24˚C" (Displayed for two seconds)
   After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".
8. Press ON/OFF button to finish.

- It is possible to finish by pressing ON/OFF button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.

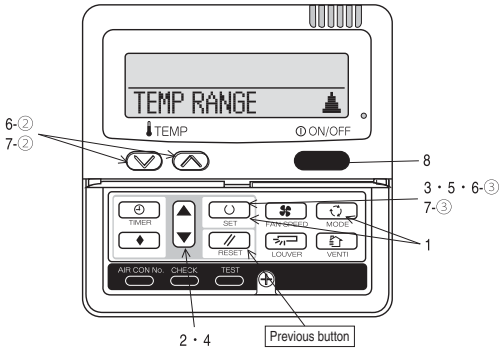

The functional setting

●The initial function setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.
As long as they are used in a typical manner, there wiil be no need to change the initial settings.
If you would like to change the initial setting marked " ○ ", set your desired setting as for the selected item.
The procedure of functional setting is shown as the following diagram.

[Flow of function setting]

Start : Stop air-conditioner and press " (SET) and " (MODE) buttons at the same time for over three seconds.
Finalize : Press " (SET) button.
Reset : Press " (RESET) button.
Select : Press ▲ ▼ button.
End : Press ON/OFF button.
It is possible to finish above setting on the way, and unfinished change of setting is unavailable.
" ○ " : Initial settings
" ※ " : Automatic criterion

Record and keep the setting

Consult the technical data etc. for each control details

Stop air-conditioner and press (SET) + (MODE) buttons at the same time for over three seconds.

FUNCTION ▼

To next page

FUNCTION ▼ (Remote control function)

Function	setting		
01 ESP SET	ESP VALID	○	Validate setting of ESP:External Static Pressure
	ESP INVALID		Invalidate setting of ESP
02 AUTO RUN SET			
	AUTO RUN ON	※	
	AUTO RUN OFF	※	Automatical operation is impossible
03 TEMP SW			
	VALID	○	
	INVALID		Temperature setting button is not working
04 MODE SW			
	VALID	○	
	INVALID		Mode button is not working
05 ON/OFF SW			
	VALID	○	
	INVALID		On/Off button is not working
06 FAN SPEED SW			
	VALID	※	
	INVALID	※	Fan speed button is not working
07 LOUVER SW			
	VALID	※	
	INVALID	※	Louver button is not working
08 TIMER SW			
	VALID	○	
	INVALID		Timer button is not working
09 SENSOR SET			
	SENSOR OFF	○	Remote thermistor is not working.
	SENSOR ON		Remote thermistor is working.
	SENSOR +3.0℃		Remote thermistor is working, and to be set for producing +3.0˚C increase in temperature.
	SENSOR +2.0℃		Remote thermistor is working, and to be set for producing +2.0˚C increase in temperature.
	SENSOR +1.0℃		Remote thermistor is working, and to be set for producing +1.0˚C increase in temperature.
	SENSOR -1.0℃		Remote thermistor is working, and to be set for producing -1.0˚C increase in temperature.
	SENSOR -2.0℃		Remote thermistor is working, and to be set for producing -2.0˚C increase in temperature.
	SENSOR -3.0℃		Remote thermistor is working, and to be set for producing -3.0˚C increase in temperature.
10 AUTO RESTART			
	INVALID	○	
	VALID		
11 VENT LINK SET			
	NO VENT	○	
	VENT LINK		In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.
	NO VENT LINK		In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), you can operate /stop the ventilation device independently by (VENT) button.
12 TEMP RANGE SET			
	INDN CHANGE	○	If you change the range of set temperature, the indication of set temperature will vary following the control.
	NO INDN CHANGE		If you change the range of set temperature, the indication of set temperature will not vary following the control, and keep the set temperature.
13 I/U FAN			
	HI-MID-LO	※	Airflow of fan becomes of ※- ※- ※ or the four speed of ※- ※- ※- ※.
	HI-LO	※	Airflow of fan becomes of ※- ※.
	HI-MID		Airflow of fan becomes of ※- ※.
	1 FAN SPEED	※	Airflow of fan is fixed at one speed.
14 POSITION			If you change the remote control function "14 POSITION ", you must change the indoor function "04 POSITION" accordingly.
	4POSITION STOP	○	You can select the louver stop position in the four.
	FREE STOP		The louver can stop at any position.
15 MODEL TYPE			
	HEAT PUMP	※	
	COOLING ONLY	※	
16 EXTERNAL CONTROL SET			
	INDIVIDUAL	○	If you input signal into CNT of the indoor printed circuit board from external, the indoor unit will be operated independently according to the input from external.
	FOR ALL UNITS		If you input into CNT of the indoor printed circuit board from external, all units which connect to the same remote control are operated according to the input from external.
17 ROOM TEMP INDICATION SET			
	INDICATION OFF	○	
	INDICATION ON		In normal working indication, indoor unit temperature is indicated instead of airflow. (Only the master remote control can be indicated.)
18 ※ INDICATION			
	INDICATION ON	○	
	INDICATION OFF		Heating preparation indication should not be indicated.
19 ℃/˚F SET			
	℃	○	Temperature indication is by degree C
	˚F		Temperature indication is by degree F

To next page

ON/OFF button (finished)

Note 1: The initial setting marked "※" is decided by connected indoor and outdoor unit, and is automatically defined as following table.

Function No.	Item	Default	Model
Remote control function02	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
		AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control function06	FAN SPEED SW	VALID	Indoor unit with two or three step of air flow setting
		INVALID	Indoor unit with only one of air flow setting
Remote control function07	LOUVER SW	VALID	Indoor unit with automatically swing louver
		INVALID	Indoor unit without automatically swing louver
Remote control function13	I/U FAN	HI-MID-LO	Indoor unit with three step of air flow setting
		HI-LO	Indoor unit with two step of air flow setting
		HI-MID	
		1 FAN SPEED	Indoor unit with only one of air flow setting
Remote control function15	MODEL TYPE	HEAT PUMP	Heat pump unit
		COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.
But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBISHION".

From previous page

(Indoor unit function) I/U FUNCTION ▲

Indoor unit No. are indicated only when plural indoor units are connected.

I/U000 ▲
I/U001 ⇕
I/U002 ⇕
I/U003 ⇕
I/U004 ⇕

To set other indoor unit, press AIRCON NO. button, which allows you to go back to the indoor unit selection screen (for example: I/U 000 ▲).

Function	setting	
02 FAN SPEED SET	STANDARD	※
	HIGH SPEED 1	※
	HIGH SPEED 2	
03 FILTER SIGN SET	INDICATION OFF	
	TYPE 1	○
	TYPE 2	
	TYPE 3	
	TYPE 4	
04 POSITION		
	4POSITION STOP	○
	FREE STOP	
05 EXTERNAL INPUT	LEVEL INPUT	○
	PULSE INPUT	
06 OPERATION PERMISSION/PROHIBITION	INVALID	○
	VALID	
07 EMERGENCY STOP	INVALID	○
	VALID	
08 ※ SP OFFSET	OFFSET +3.0℃	
	OFFSET +2.0℃	
	OFFSET +1.0℃	
	NO OFFSET	○
09 RETURN AIR TEMP	OFFSET +2.0℃	
	OFFSET +1.5℃	
	OFFSET +1.0℃	
	NO OFFSET	○
	OFFSET -1.0℃	
	OFFSET -1.5℃	
	OFFSET -2.0℃	
10 ※ FAN CONTROL	LOW FAN SPEED	○
	SET FAN SPEED	
	INTERMITTENCE	
	FAN OFF	
11 FROST PREVENTION TEMP	TEMP HIGH	
	TEMP LOW	○
12 FROST PREVENTION CONTROL	FAN CONTROL ON	○
	FAN CONTROL OFF	
13 DRAIN PUMP LINK	❄◇	○
	❄◇ AND ※	
	❄◇ AND ※ AND ≋	
	※◇ AND ≋	
14 ❄ FAN REMAINING	NO REMAINING	○
	0.5 HOUR	
	1 HOUR	
	6 HOUR	
15 ※ FAN REMAINING	NO REMAINING	○
	0.5 HOUR	
	2 HOUR	
	6 HOUR	
16 ※ FAN INTERMITTENCE	NO REMAINING	○
	2minOFF 5minON	
	5minOFF 5minON	
17 PRESSURE CONTROL	STANDARD	※
	TYPE1	※

The filter sign is indicated after running for 180 hours.
The filter sign is indicated after running for 600 hours.
The filter sign is indicated after running for 1000 hours.
The filter sign is indicated after running for 1000 hours, then the indoor unit will be stopped by compulsion after 24 hours.

If you change the indoor function "04 POSITION", you must change the remote control function "14 POSITION" accordingly.
You can select the louver stop position in the four.
The louver can stop at any position.

Permission/prohibition control of operation will be valid.

With the VRF series, it is used to stop all indoor units connected with the same outdoor unit immediately.
When stop signal is inputed from remote on-off terminal "CNT-6", all indoor units are stopped immediately.

To be reset for producing +3.0˚C increase in temperature during heating.
To be reset for producing +2.0˚C increase in temperature during heating.
To be reset for producing +1.0˚C increase in temperature during heating.

To be reset producing +2.0˚C increase in return air temperature of indoor unit.
To be reset producing +1.5˚C increase in return air temperature of indoor unit.
To be reset producing +1.0˚C increase in return air temperature of indoor unit.

To be reset producing -1.0˚C increase in return air temperature of indoor unit.
To be reset producing -1.5˚C increase in return air temperature of indoor unit.
To be reset producing -2.0˚C increase in return air temperature of indoor unit.

When heating thermostat is OFF, fan speed is low speed.
When heating thermostat is OFF, fan speed is set speed.

When heating thermostat is OFF, fan speed is operated intermittently.
When heating thermostat is OFF, the fan is stopped.
When the remote thermistor is working, "FAN OFF" is set automatically.
Do not set "FAN OFF" when the indoor unit's thermistor is working.

Change of indoor heat exchanger temperature to start frost prevention control.

Working only with the Single split series.
To control frost prevention, the indoor fan tap is raised.

Drain pump is run during cooling and dry.
Drain pump is run during cooling, dry and heating.
Drain pump is run during cooling, dry, heating and fan.
Drain pump is run during cooling, dry and fan.

After cooling is stopped, the fan does not perform extra operation.
After cooling is stopped, the fan perform extra operation for half an hour.
After cooling is stopped, the fan perform extra operation for an hour.
After cooling is stopped, the fan perform extra operation for six hours.

After heating is stopped or heating thermostat is OFF, the fan does not perform extra operation.
After heating is stopped or heating thermostat is OFF, the fan perform extra operation for half an hour.
After heating is stopped or heating thermostat is OFF, the fan perform extra operation for two hours.
After heating is stopped or heating thermostat is OFF, the fan perform extra operation for six hours.

During heating is stopped or heating thermostat is OFF, the fan perform intermittent operation for five minutes with low fan speed after twenty minutes' OFF.
During heating is stopped or heating thermostat is OFF, the fan perform intermittent operation for five minutes with low fan speed after five minutes' OFF.

Connected "OA Processing" type indoor unit, and is automatically defined.

Note2: Fan setting of "HIGH SPEED"

Fan tap		Indoor unit air flow setting			
		❄■■■ - ❄■■□ - ❄■□□	❄■■■ - ❄■■□ - ❄□□□	❄■■■ - ❄■□□	❄■■■ - ❄■□□
FAN SPEED SET	STANDARD	UH - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me
	HIGH SPEED1, 2	UH - UH - Hi - Me	UH - Hi - Me	UH - Me	UH - Hi

Initial function setting of some indoor unit is "HIGH SPEED".
4 speed is not able to be set with wireless remote control.

From previous page

How to set function

1. **Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼" will be displayed.**



2. **Press (SET) button.**
3. **Make sure which do you want to set, "FUNCTION ▼" (remote control function) or "I/U FUNCTION▲ " (indoor unit function).**
4. **Press ▲ or ▼ button.**
   Selecct "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).



5. **Press (SET) button.**



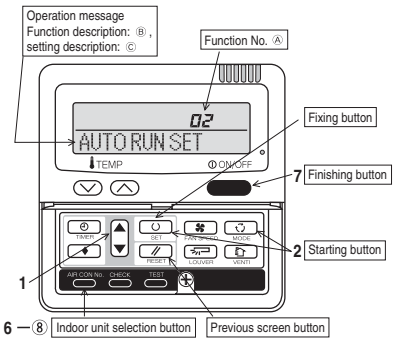

6. **【On the occasion of remote control function selection】**

① "DATA LOADING" (Indication with blinking)
↓
Display is changed to "01 ESP SET".

② Press ▲ or ▼ button.
"No. and function"are indicated by turns on the remote control function table, then you can select from them.
(For example)



③ Press (SET) button.
The current setting of selected function is indicated.
(for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is selected



④ Press ▲ or ▼ button.
Select the setting.



⑤ Press (SET)
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously ,and if to finish, go to 7.



7. **Press ON/OFF button.**
   Setting is finished.

【On the occasion of indoor unit function selection】

① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data)
↓
Indication is changed to "02 FAN SPEED SET".
Go to ②.

[Note]

(1) If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.



(2) Press ▲ or ▼ button.
Select the number of the indoor unit you are to set
If you select "ALL UNIT ▼", you can set the same setting with all unites.

(3) Press (SET) button.

② Press ▲ or ▼ button.
"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.
(For example)



③ Press (SET) button.
The current setting of selected function is indicated.
(For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.



④ Press ▲ or ▼ button.
Select the setting.

⑤ Press (SET) button.
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, set as the same procedure if you want to set continuously , and if to finish, go to 7.



※ When plural indoor units are connected to a remote control, press the AIRCON NO. button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")

- It is possible to finish by pressing ON/OFF button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

【How to check the current setting】

When you select from "No. and funcion" and press set button by the previous operation, the "Setting" displayed first is the current setting.
(But, if you select "ALL UNIT ▼ ", the setting of the lowest number indoor unit is displayed.)

10.4 Installation of outdoor unit

RWC012A038

(1) Models SRC50, 60ZMXA-S

Model 40·50·60
R410A REFRIGERANT USED

• This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 33.
• When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, ⚠ **WARNING** and ⚠ **CAUTION**.
  ⚠ **WARNING** : Wrong installation would cause serious consequences such as injuries or death.
  ⚠ **CAUTION** : Wrong installation might cause serious consequences depending on circumstances.
  Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
- For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works.
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- If unusual noise can be heard during operation, consult the dealer.
- The meanings of "Marks" used here are shown as follows:

⊘	Never do it under any circumstances.	❗ ⏚	Always do it according to the instruction.

⚠ WARNING

❗

- **Installation must be carried out by the qualified installer.**
  If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except the by qualified installer.
- **Install the system in full accordance with the installation manual.**
  Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.
- **Be sure to use only for household and residence.**
  If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction.
- **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149).**
  If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident.
- **Use the original accessories and the specified components for installation.**
  If parts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury.
- **Install the unit in a location with good support.**
  Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- **Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.**
  Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- **Ventilate the working area well in the event of refrigerant leakage during installation.**
  If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- **Use the prescribed pipes, flare nuts and tools for R410A.**
  Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- **Tighten the flare nut by torque wrench with specified method.**
  If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period.
- **Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.**
  If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause bust or personal injury due to anomalously high pressure in the refrigerant.
- **The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.**
  Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.
- **Be sure to shut off the power before starting electrical work.**
  Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- **Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.**
  Unconformable cables can cause electric leak, anomalous heat production or fire.
- **This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:16A) with a contact separation of at least 3mm.**
- **Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.**
  Incorrect installation may result in overheating and fire.
- **Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.**
  Loose connections or cable mountings can cause anomalous heat production or fire.
- **Be sure to fix up the service panels.**
  Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- **Be sure to switch off the power supply in the event of installation, inspection or servicing.**
  If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
  If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
  If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Be sure to wear protective goggles and gloves while at work.**
- **Earth leakage breaker must be installed.**
  If the earth leakage breaker is not installed, it can cause electric shocks.

⊘

- **Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.**
  If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- **Do not processing, splice the power cord, or share a socket with other power plugs.**
  This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc.
- **Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to tread it.**
  This may cause fire or heating.
- **Do not run the unit with removed panels or protections.**
  Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- **Do not perform any change of protective device itself or its setup condition.**
  The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

⚠ CAUTION

• Carry out the electrical work for ground lead with care.
Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.

• Use the circuit breaker for all pole correct capacity. Circuit breaker should be the one that disconnect all poles under over current.
Using the incorrect circuit breaker, it can cause the unit malfunction and fire.

• Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations.
The isolator should be locked in OFF state in accordance with EN60204-1.

• After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured.

• Secure a space for installation, inspection and maintenance specified in the manual.
Insufficient space can result in accident such as personal injury due to falling from the installation place.

• Take care when carrying the unit by hand.
If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.

• Dispose of any packing materials correctly.
Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.

• Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.

• When perform the air conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.

• Do not install the unit in the locations listed below.
- Locations where carbon fiber, metal powder or any powder is floating.
- Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur.
- Vehicles and ships.
- Locations where cosmetic or special sprays are often used.
- Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
- Locations where any machines which generate high frequency harmonics are used.
- Locations with salty atmospheres such as coastlines.
- Locations with heavy snow (If installed, be sure to provide base flame and snow hood mentioned in the manual).
- Locations where the unit is exposed to chimney smoke.
- Locations at high altitude (more than 1000m high).
- Locations with ammonic atmospheres.
- Locations where heat radiation from other heat source can affect the unit.
- Locations without good air circulation.
- Locations with any obstacles which can prevent inlet and outlet air of the unit.
- Locations where short circuit of air can occur (in case of multiple units installation).
- Locations where strong air blows against the air outlet of outdoor unit.
- Locations where something located above the unit could fall.

It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.

• Do not install the outdoor unit in the locations listed below.
- Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood.
- Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc.
- Locations where vibration can be amplified and transmitted due to insufficient strength of structure.
- Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room).
- Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m).
- Locations where drainage cannot run off safely.

It can affect surrounding environment and cause a claim.

• Do not install the unit near the location where leakage of combustible gases can occur.
If leaked gases accumulate around the unit, it can cause fire.

• Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.
Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.

• Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics.
Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

• Do not install the outdoor unit in a location where insects and small animals can inhabit.
Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.

• Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.
Using an old and damage base flame can cause the unit falling down and cause personal injury.

• Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.
Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.

• Do not touch any buttons with wet hands.
It can cause electric shocks.

• Do not touch any refrigerant pipes with your hands when the system is in operation.
During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.

• Do not touch the suction or aluminum fin on the outdoor unit.
This may cause injury.

• Do not put anything on the outdoor unit and operating unit.
This may cause damage the objects or injury due to falling to the object.

• Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.

• Do not clean up the unit with water.

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

Accessories for outdoor unit	Q'ty
① Grommet (Heat pump type only)	4
② Drain elbow (Heat pump type only)	1

Option parts	Q'ty
ⓐ Sealing plate	1
ⓑ Sleeve	1
ⓒ Inclination plate	1
ⓓ Putty	1
ⓔ Drain hose (extension hose)	1
ⓕ Piping cover (for insulation of connection piping)	1

Necessary tools for the installation work			
1	Plus headed driver	9	Wrench key (Hexagon) [4m/m]
2	Knife	10	Vacuum pump
3	Saw	11	Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)
4	Tape measure	12	Gauge manifold (Designed specifically for R410A)
5	Hammer	13	Charge hose (Designed specifically for R410A)
6	Spanner wrench	14	Flaring tool set (Designed specifically for R410A)
7	Torque wrench [14.0～62.0N·m (1.4～6.2kgf·m)]	15	Gas leak detector (Designed specifically for R410A)
8	Hole core drill (65mm in diameter)	16	Gauge for projection adjustment (Used when flare is made by using conventional flare tool)

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joi nt provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

⚠CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery



- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

2) Portage



- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

3) Selecting the installation location

Be sure to select a suitable installation place in consideration of following conditions.

- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5 lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.

4) Caution about selection of installation location

(1) If the unit is installed in the area where the snow will accumulate, following measures are required.
The bottom plate of unit and intake, outlet may be blocked by snow.

1 Install the unit on the base so that the bottom is higher than snow cover surface.



2 Install the unit under or provide the roof on site.

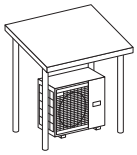

Since drain water generated by defrost control may freeze, following measures are required.

- Do not execute drain piping work by using a drain elbow and drain grommets (accessories). [Refer to Drain piping work.]

(2) If the unit can be affected by strong wind, following measures are required.
Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

1 Place the unit outlet side is turned to the wall.



2 Install so the direction of the air from the blowing outlet will be perpendicular to the direction of the wind.



5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

(mm)

Example installation / Size	Model 40, 50, 60			
	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

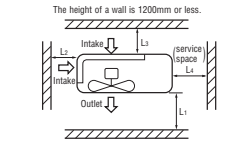

6) Installation

① Anchor bolt fixed position

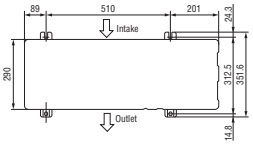

② Notabilia for installation



- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5mm or less.) Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions		Dimensional restrictions	Marks appearing in the drawing on the right
Main pipe length		30m or less	L
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher,	20m or less	H
	When the outdoor unit is positioned lower,	20m or less	H

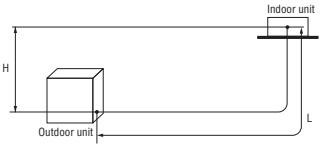

⚠CAUTION

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size

Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Model 40, 50, 60	
	Gas pipe	Liquid pipe
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare
Refrigerant piping (branch pipe L)	ø12.7	ø6.35
Indoor unit connected	ø12.7	ø6.35

When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.



3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter [mm]	ø6.35	ø12.7
Minimum pipe wall thickness [mm]	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30

4) On-site piping work

⚠ IMPORTANT Take care so that installed pipes may not touch components within a unit.
If touching with an internal component, it will generate abnormal sounds and/or vibrations.

How to remove the side cover Please remove the screw of a side cover and remove to the front.

- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100~R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

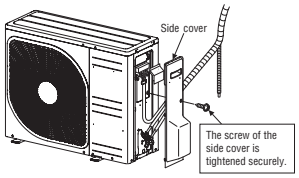

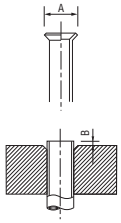

Flared pipe end : A (mm)

Copper pipe outer diameter	A $^{0}_{-04}$
ø6.35	9.1
ø12.7	16.6

Copper pipe protrusion for flaring : B (mm)

Copper pipe outer diameter	In the case of a rigid (clutch) type	
	With an R410A tool	With a conventional tool
ø6.35	0~0.5	1.0~1.5
ø12.7		

⚠ CAUTION **Do not apply force beyond proper fastening torque in tightening the flare nut.**

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35 (1/4")	14~18	45~60	150
ø12.7 (1/2")	49~61	30~45	250

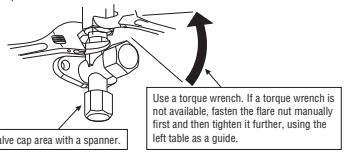

5) Air tightness test

① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
  a) Raise the pressure to 0.5MPa, and then stop. Leave it for five minutes to see if the pressure drops.
  b) Then raise the pressure to 1.5MPa, and stop. Leave it for five more minutes to see if the pressure drops.
  c) Then raise the pressure to the specified level (4.15MPa), and record the ambient temperature and the pressure.
  d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01MPa. The pressure, if changed, should be compensated for.
  e) If a pressure drop is observed in checking e) and a) – d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air tightness test again.
② In conducting an air tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

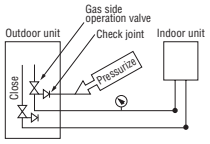

6) Evacuation

<Work flow>

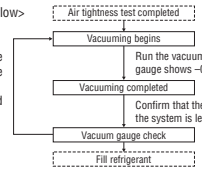

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise.
Check the system for a leaky point and then draw air to create a vacuum again.

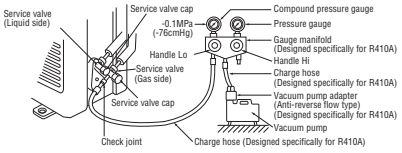

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

Securely tighten the service valve cap and the check joint blind nut after adjustment.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Check joint blind nut tightening torque (N·m)
ø6.35 (1/4")	20~30	10~12
ø12.7 (1/2")	25~35	

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Model 40, 50, 60	0.02	1.50	15

- This unit contains factory charged refrigerant covering 15m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m refrigerant piping.
  When refrigerant piping exceeds 15m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m.
- If an existing pipe system is used, a required refrigerant charge volume will very depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

Additional charge volume (kg) = { Main length (m) – Factory charged volume 15 (m) } x 0.02 (kg/m)

* When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- For an installation measuring 15m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the service panel.

8) Heating and condensation prevention

(1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
- Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.

(2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
- All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
- Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
- Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
- **Both gas and liquid pipes need to be dressed with 20mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

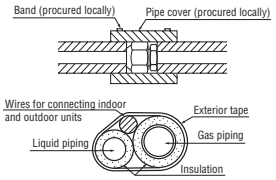

3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

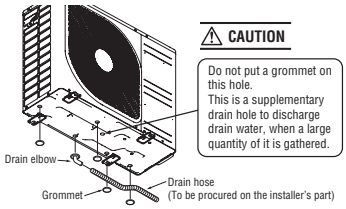

- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks.
  Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country.
Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
  - braided cord (code designation 60245 IEC 51)
  - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
  - flat twin tinsel cord (code designation 60227 IEC 41)

  Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
  If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- For power supply cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Never use a shield cable.
- SRC-ZMXA-S complies with the DRED (Demand Response Enabling Devices) standard AS/NZS4755.3.1 and supports demand response modes 1, 2, and 3 (DRM1, 2, and 3). Since the air conditioner limits the electric power or energy by receiving the DRED input signal, the sense of cooling operation or heating operation may deteriorate over time. The outdoor unit of this air conditioner is equipped with a terminal block for DRED input and supports ELV (Extra-Low Voltage) complying with AS/NZS60335.1.

⚠ CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.

Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.

H05RNR4G1.5 (Example) or 245IEC57

H	Harmonized cable type
05	300/500 volts
R	Natural-and/or synth. rubber wire insulation
N	Polychloroprene rubber conductors insulation
R	Stranded core
4or5	Number of conductors
G	One conductor of the cable is the earth conductor (yellow/green)
1.5	Section of copper wire (mm²)

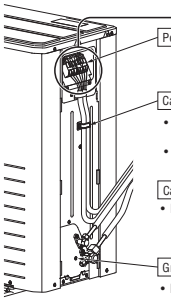

Power cable, indoor - outdoor connecting wire circuit diagram

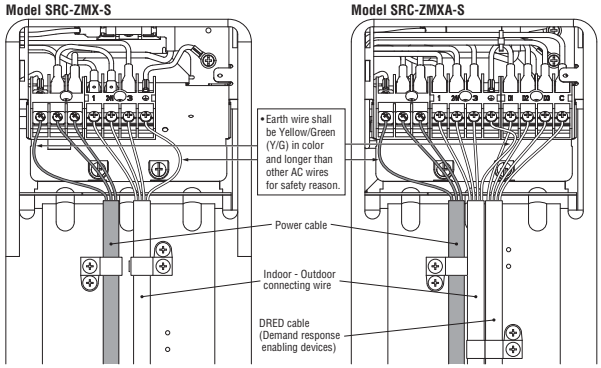

Power cable, indoor-outdoor connecting wires

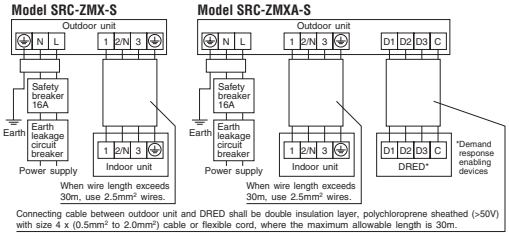

- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

⚠ CAUTION Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

Phase	Earth leakage breaker	Switchgear or Circuit Breaker		Power source (minimum)	Interconnecting and grounding wires (minimum)
		Switch breaker	Over current protector rated capacity		
Single-phase	15A, 30mA, 0.1sec or less	30A	16A	2.0mm²	1.5mm² X 4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

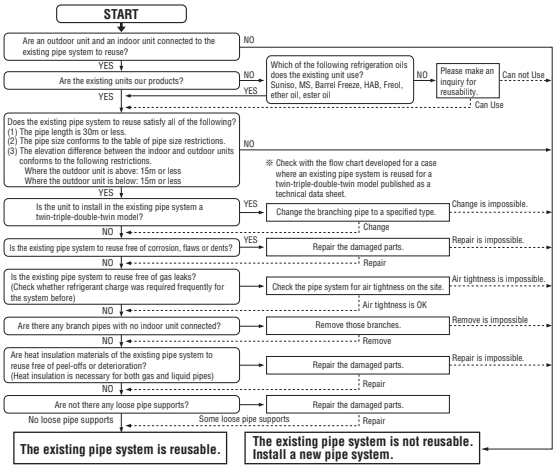

<Table of pipe size restrictions>

◎: Standard pipe size ○: Usable △: Restricted to shorter pipe length limits

Additional charge volume per meter of pipe		0.02kg/m	0.06kg/m
Pipe size	Liquid pipe	ø6.35	ø9.52
	Gas pipe	ø12.7	ø12.7
40	Usability	◎	△
	Maximum one-way pipe length	30	10
	Length covered without additional charge	15	5
50	Usability	◎	△
	Maximum one-way pipe length	30	10
	Length covered without additional charge	15	15
60	Usability	◎	△
	Maximum one-way pipe length	30	10
	Length covered without additional charge	15	5

- **Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.**
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) =
(Main pipe length (m) − Length covered without additional charge shown in the table (m)) X Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
Example) When an 60 is installed in a 10m long existing pipe system (liquid ø9.52, gas ø12.7), the quantity of refrigerant to charge additionally should be (10m−5m) x 0.06kg/m = 0.3 kg.

⚠ WARNING

<Where the existing unit can be run for a cooling operation.>
Carry out the following steps with the excising unit (in the order of (1), (2), (3) and (4))
(1) Run the unit for 30 minutes for a cooling operation.
(2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
(3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
(4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>
Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly.
Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- ☐ Power cables and connecting wires are securely fixed to the terminal block.
- ☐ The power supply voltage is correct as the rating.
- ☐ The drain hose is fixed securely.
- ☐ Operation valve is fully open.
- ☐ No gas leaks from the joints of the service valve.
- ☐ The pipe joints for indoor and outdoor pipes have been insulated.
- ☐ The reverse flow check cap is attached.
- ☐ The cover of the pipe cover (A) faces downward to prevent rain from entering.
- ☐ Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- ☐ The screw of the side cover is tightened securely.